

OPENMOVE

User Guide

S661

Contents

HOW IT WORKS

Headphone Controls	04
ON/OFF	05
Pairing	06
How to Wear	07
Volume	08
Multifunction Button	09
Check Battery Status	11

EXTRA FEATURES

EQ Modes	13
Switching EQ modes	14
Multipoint Pairing	15
Turn Multipoint Pairing Off	21
Restore Factory Settings	23
Changing languages	25

CARE AND MAINTENANCE

 
Charging Tips	28
Warranty	29

TROUBLESHOOTING 30


WHAT'S IN THE BOX 31

How It Works

Headphone Controls

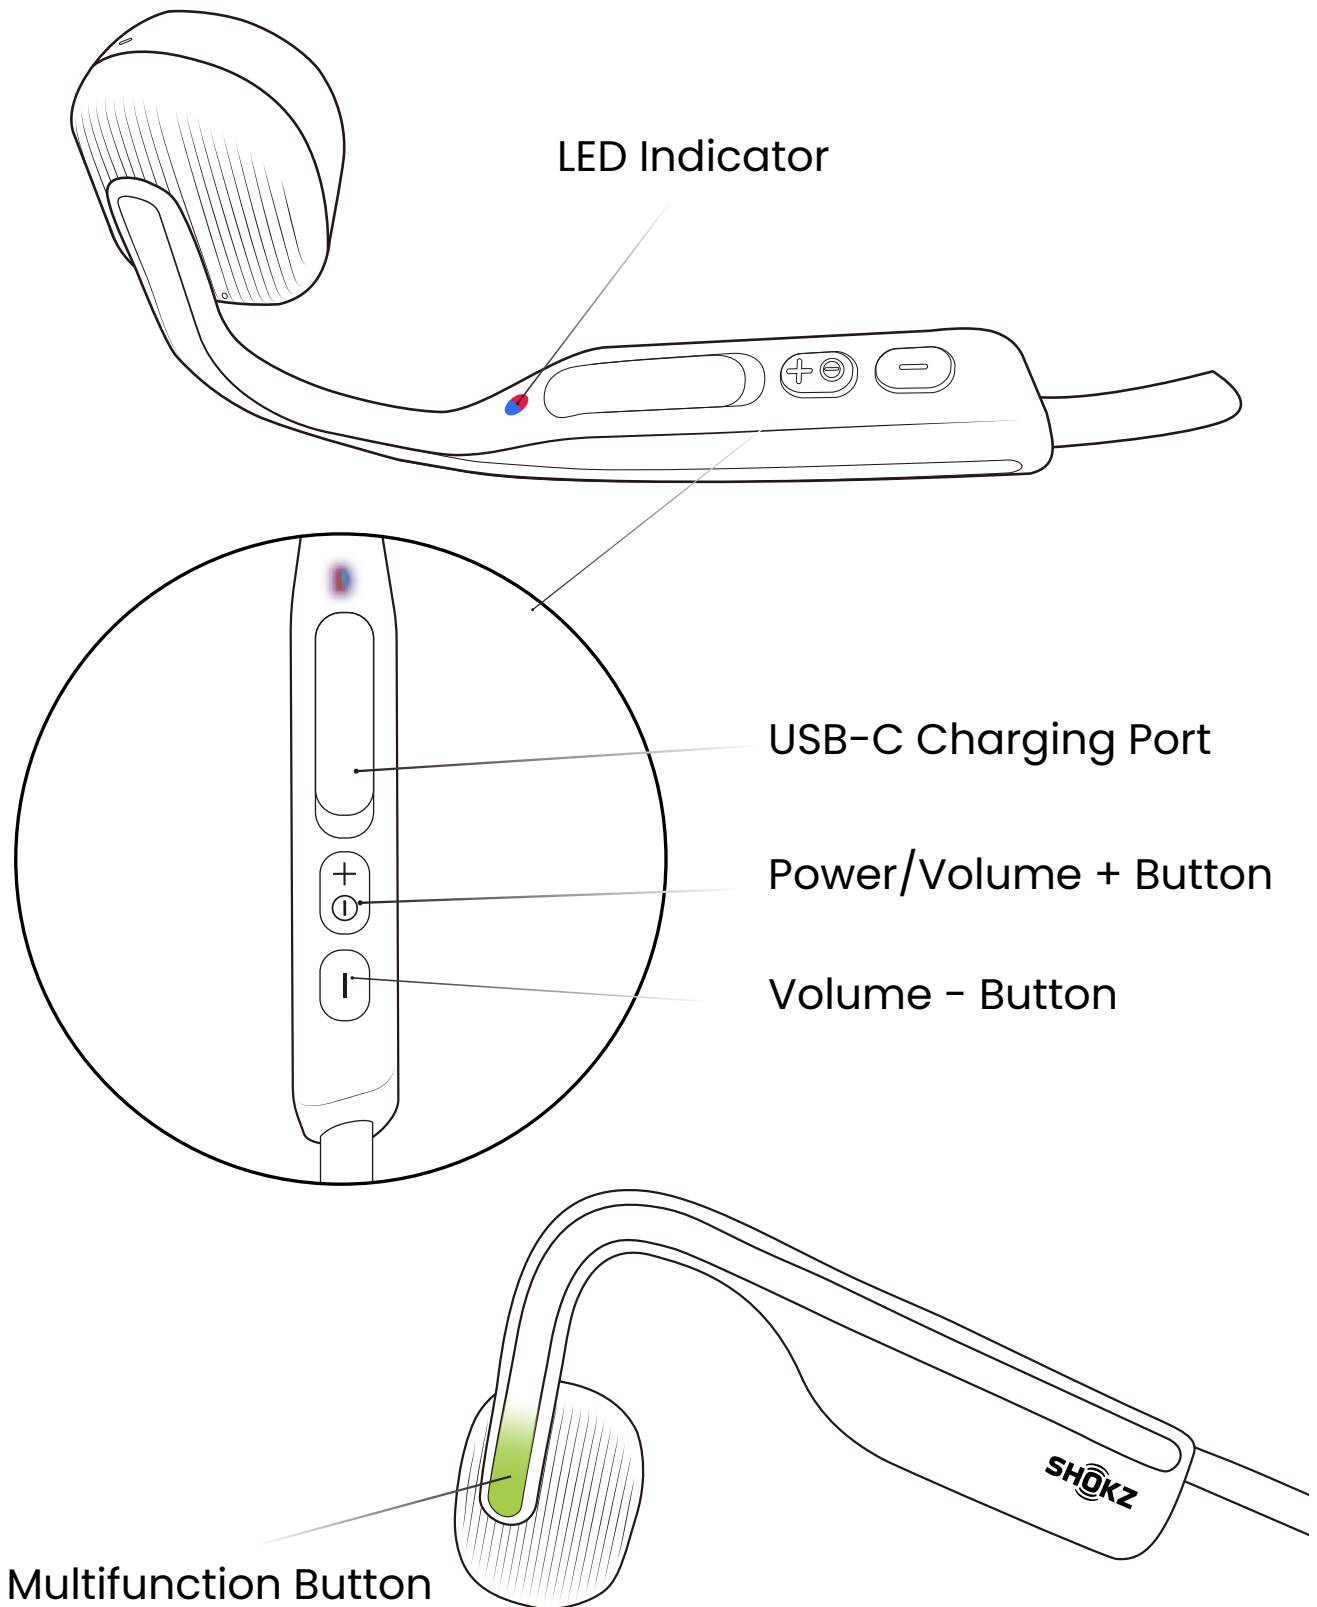

ON/OFF

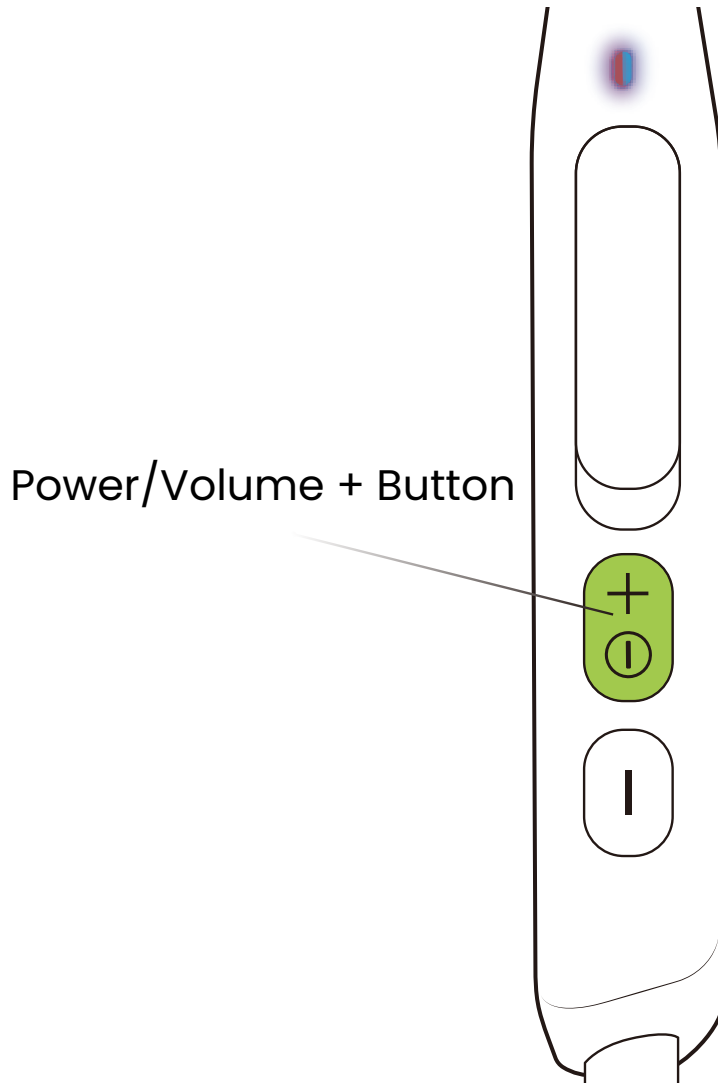 

Turn on the headphones:

Press and hold the Power/Volume + Button until the LED Indicator flashes blue.

 
*Audrey will say: "Welcome to Shokz"

Turn off the headphones:


Press and hold the Power/Volume + Button until the LED Indicator flashes red.

*Audrey will say: "Power off"

Pairing

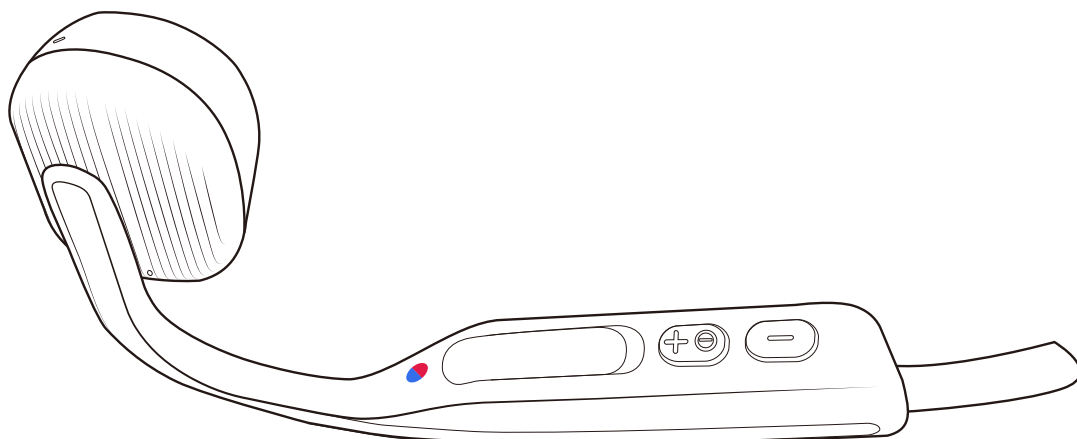


 1. Start with OpenMove turned off.
2. Press and hold the Volume + Button until the LED Indicator flashes red and blue alternately.

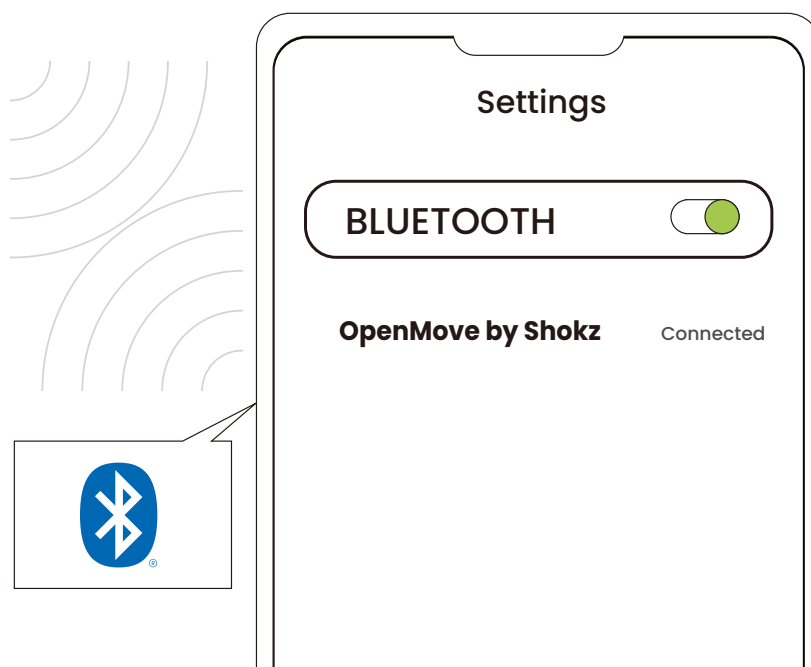

3. Open your device's Bluetooth settings and select " OpenMove by Shokz." Audrey will say "connected."

 How to Wear

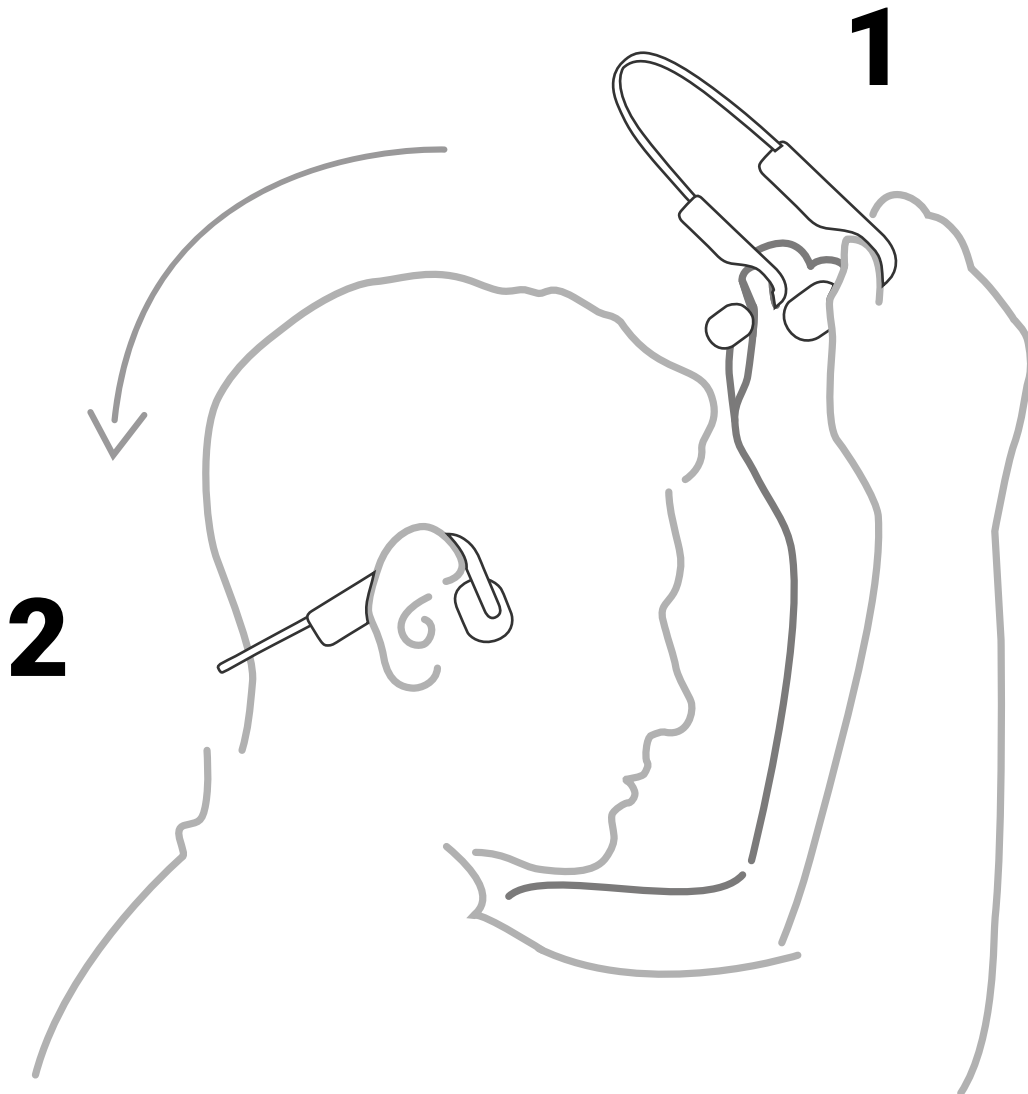


Pick up the headphones, bring them behind the back of the base of your neck, position the earhooks on your ears, then enjoy your music!

*Wearing your headphones the wrong way could cause discomfort. The transducers should rest in front of your ears.

Volume



 Operate volume controls while audio is playing.

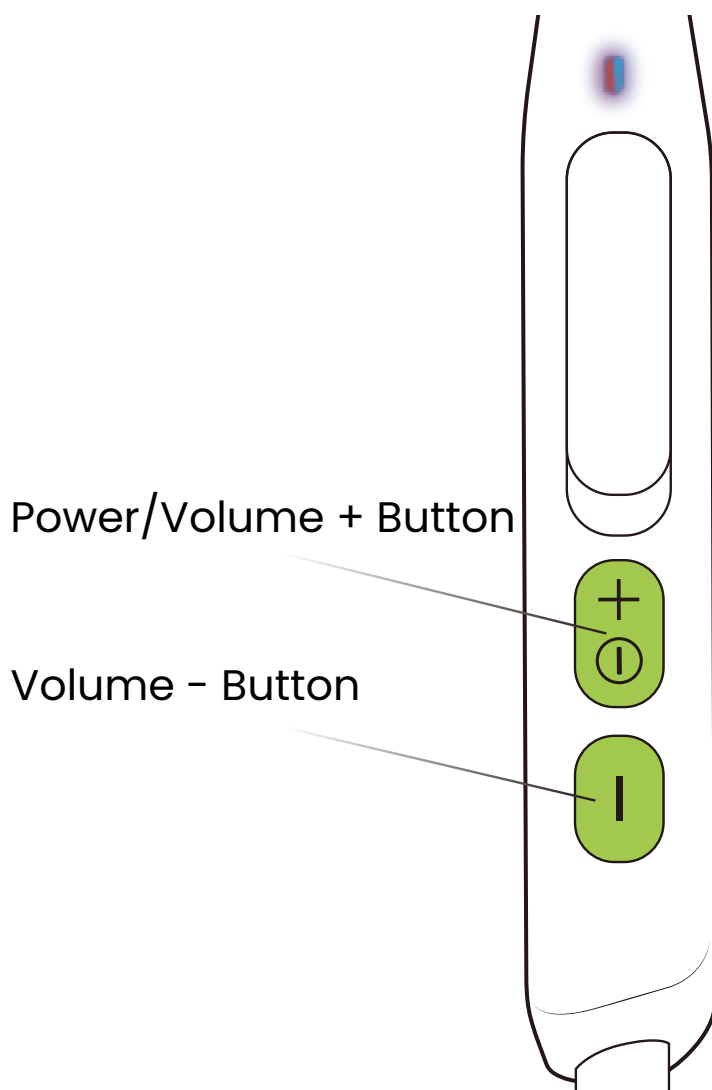

How to change volume:

 
While your audio is playing, adjust headphone volume by pushing either the Volume + or Volume - buttons.

*A “beep” will sound when the volume is at its max.



*Listening with headphones at high volume may affect your hearing and the audio will be distorted.

Multifunction Button

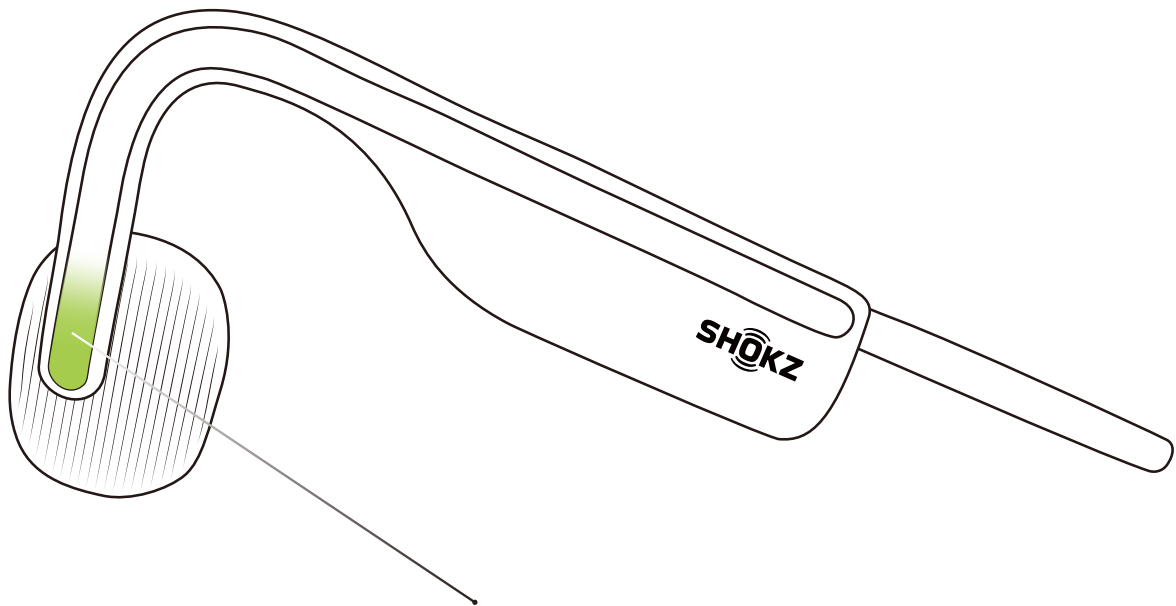

Multifunction Button

▶|| Play/pause music ●

Click once



Answer call ●

Click once

⏮ Next song ● ●

Double-click while music is playing



End call ●

Click once

⏪ Previous song ● ● ●

Triple-click while music is playing

Multifunction Button


Play music	Click once
Pause music	Click once
Next song	Double-click while music is playing
Previous song	Triple-click while music is playing
Switch language	Double-click while on pairing
Answer call	Click once
End call	Click once during a call
Answer call waiting and end current call	Press and hold for 2 seconds when receiving a second call
Ignore a call	Press and hold for 2 seconds during an incoming call
Activate voice assistant	Press and hold for 2 seconds when device is on standby
Redial last number	Double-click on standby

*Only applicable for phone calls, not online calls

Check Battery Status



 Operate controls while
audio is not playing

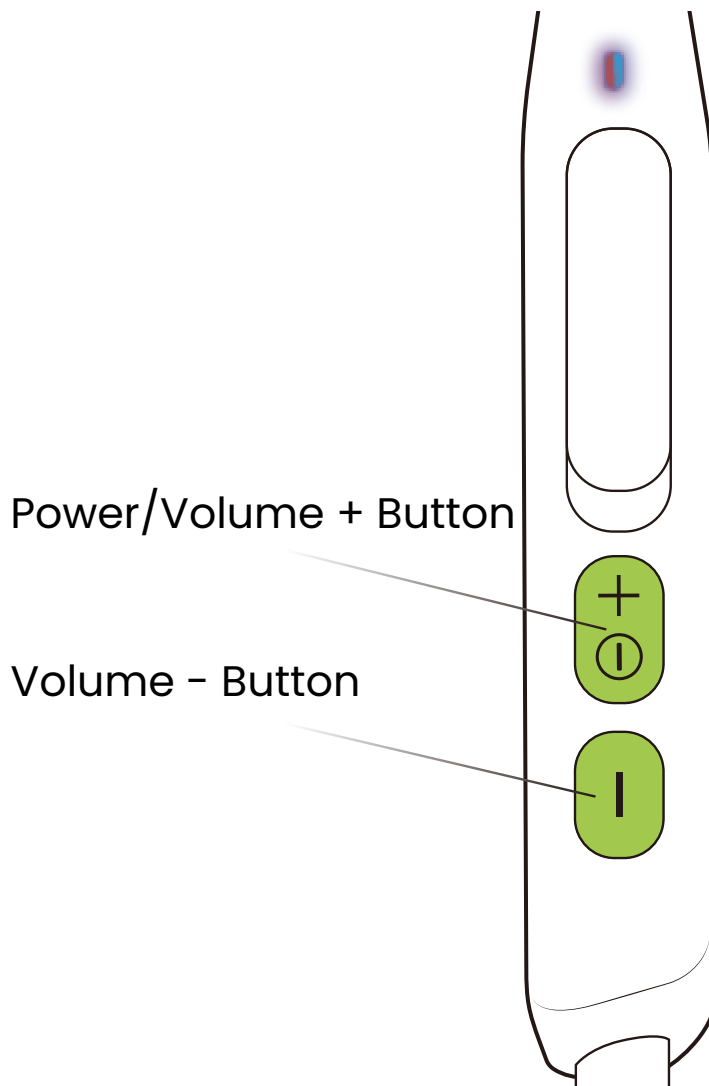

How to check battery status:

Click the Volume + or Volume - button while music is paused,
Audrey will tell you the battery status:

* "Battery high/Battery medium/Battery low/Charge me"

Extra Features

EQ Modes



Standard Mode:

Balanced frequency for listening to music



 
Vocal Booster Mode:

Enhanced intermediate frequencies
for audiobooks, podcasts, etc.

Switching EQ Modes



Operate controls while music is playing

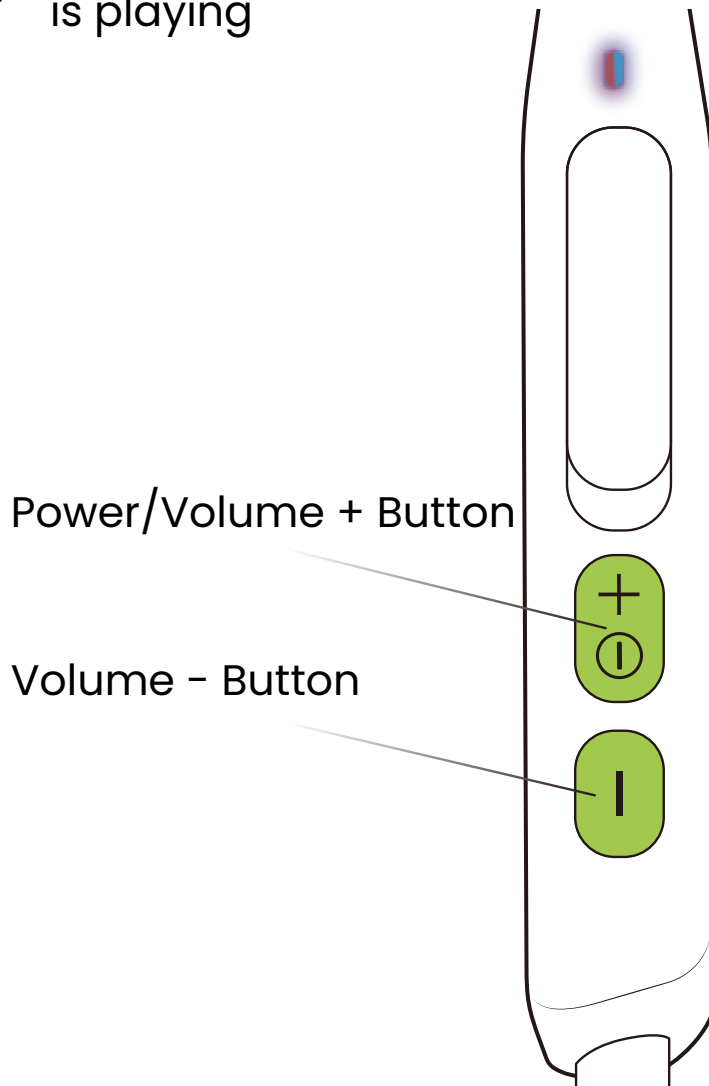


How to switch EQ mode:

Press and hold both buttons (Power/Volume + Button and Volume - Button) while music is playing until you hear a beep.

*Audrey will say: "Standard Mode/Vocal Booster Mode."

 Multipoint Pairing

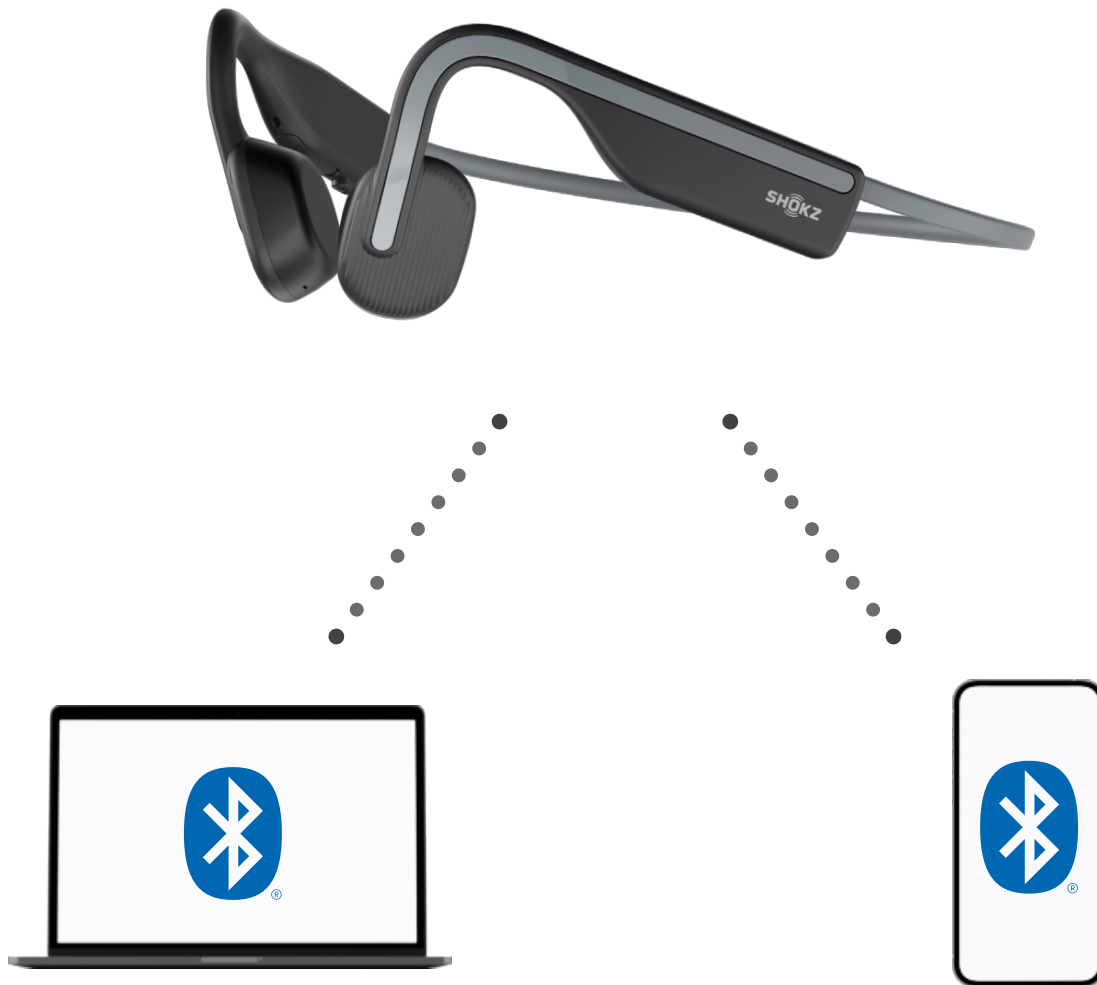


Pair Two Devices


Switch between two devices seamlessly with multipoint pairing

Multipoint Pairing

 - OFF** Operate controls with
headphones powered off

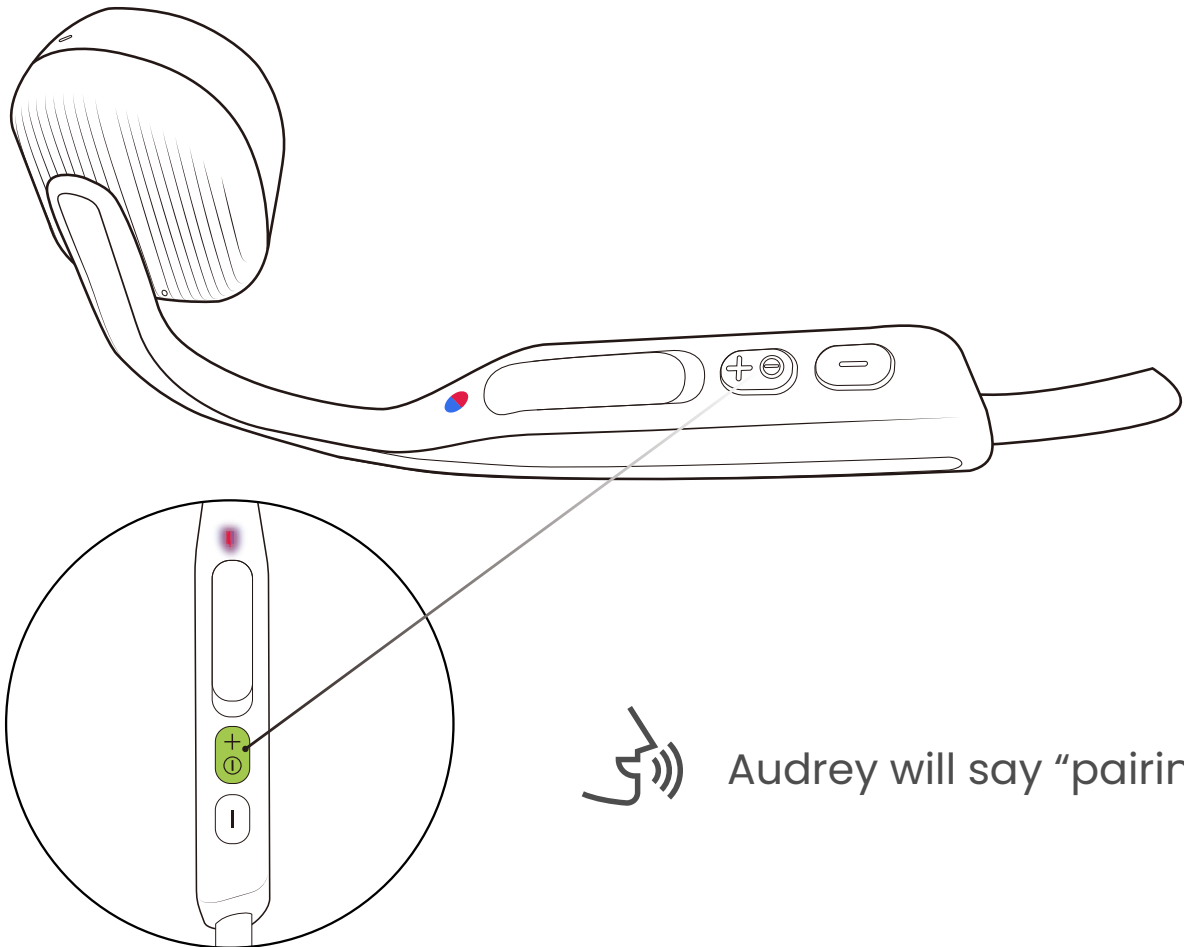


 1. Start with your headphones powered off.
2. Press and hold Volume + until Audrey will say "pairing" and the LED indicator flashes red and blue alternately.

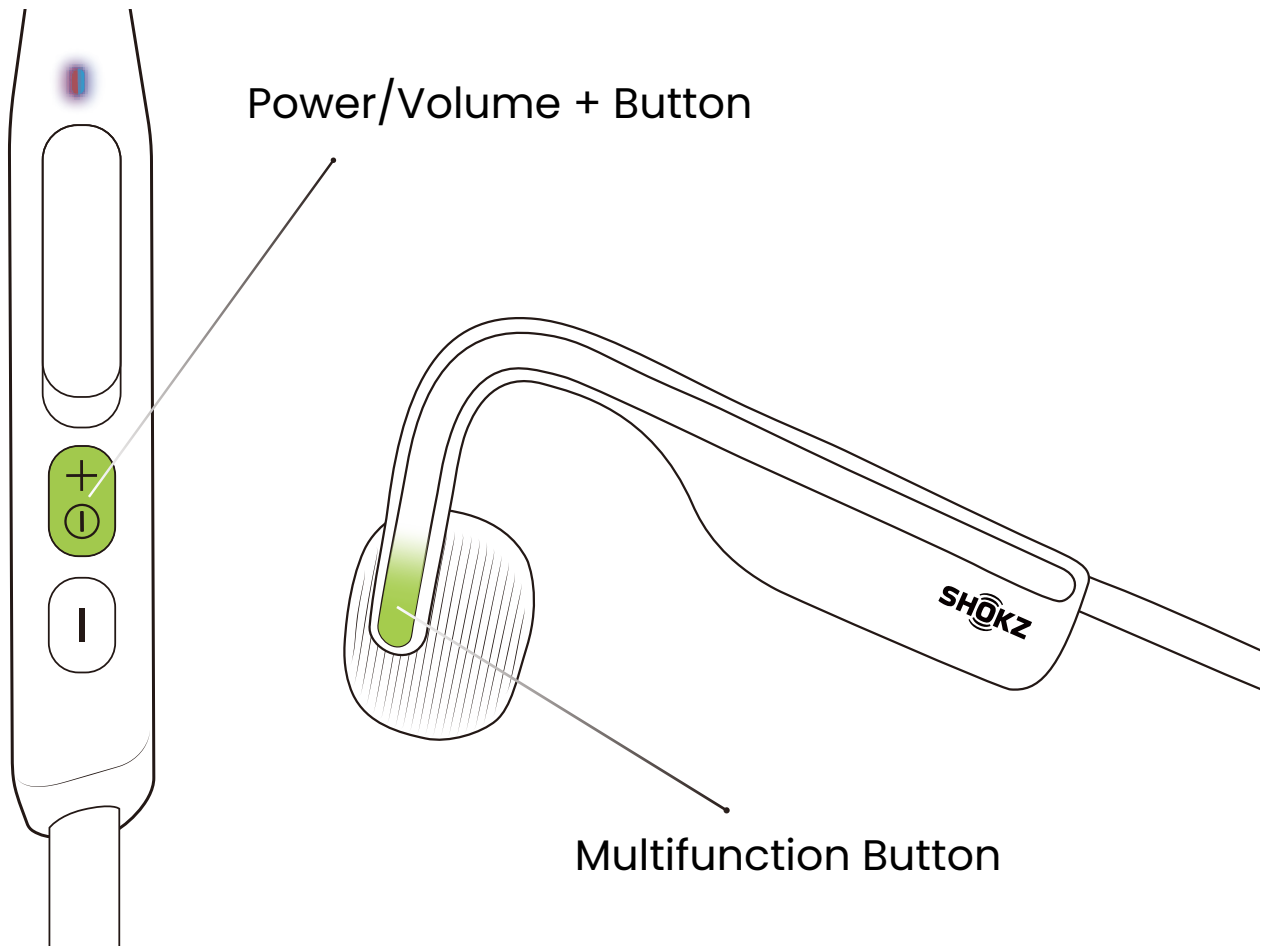

Audrey will say "multipoint enabled."

 3. Press and hold the multifunction button and Volume + button until Audrey say "multipoint enabled."

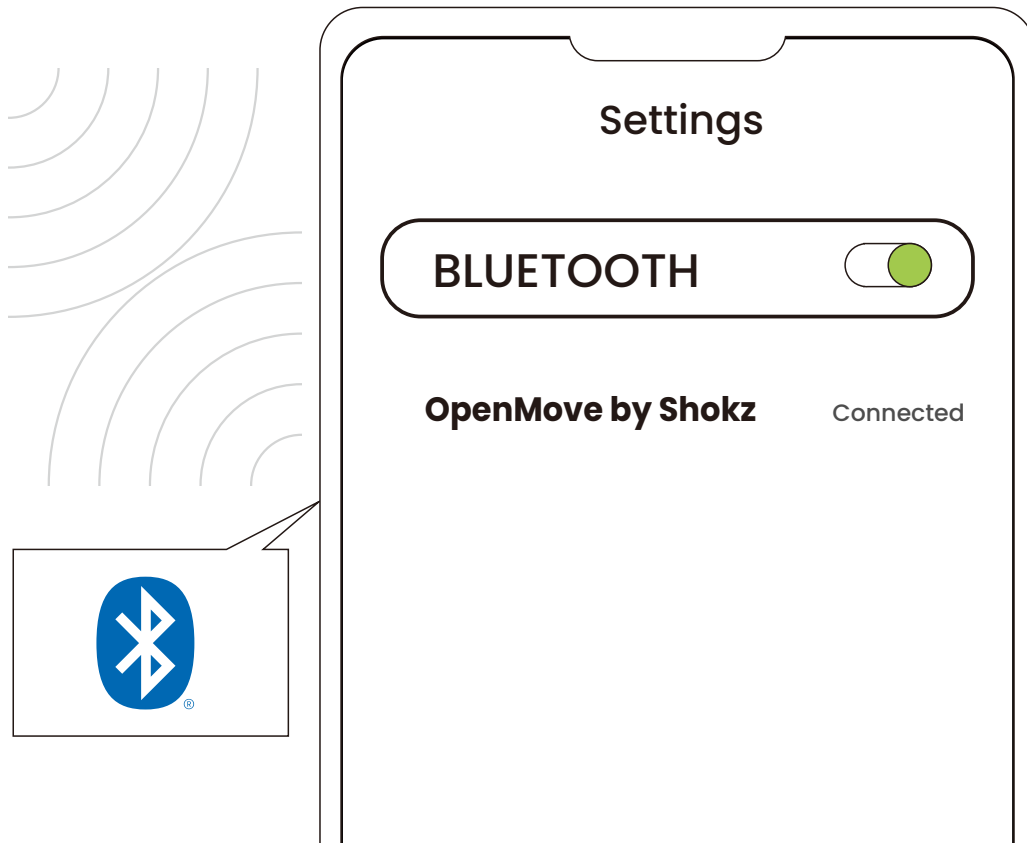


First Device



Audrey will say "connected".

4. Open first device's Bluetooth® menu and select "OpenMove by Shokz." Audrey will say "connected".

 5. Turn your headphones off.

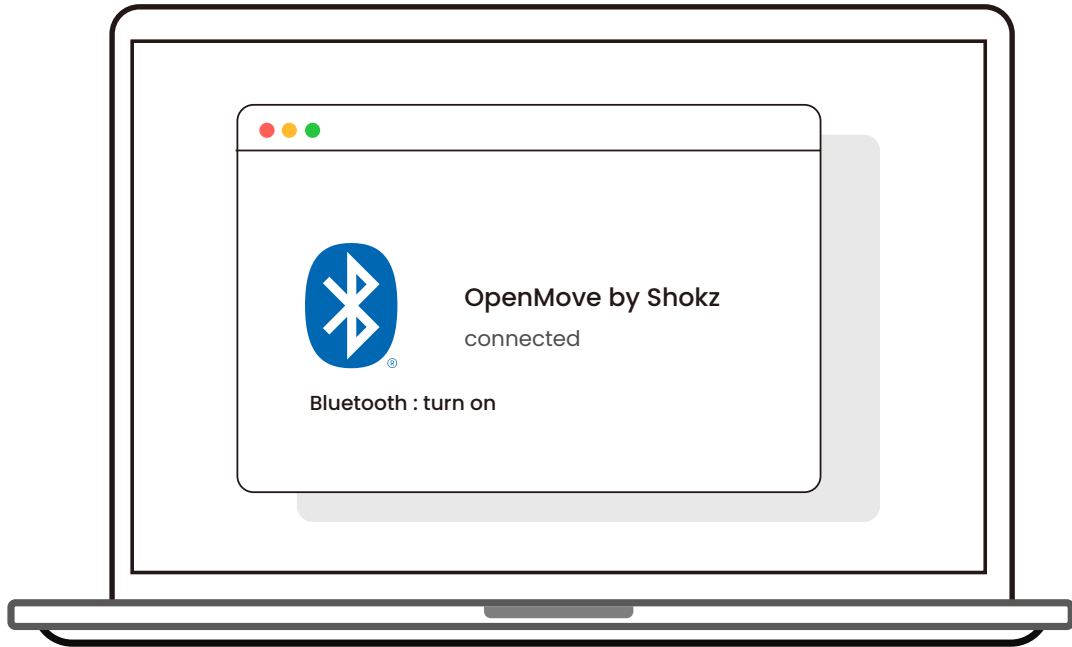

Second Device

 


Audrey will say "connected".

6.Re-enter pairing mode by pressing and holding Volume + until Audrey says "pairing"and the LED indicator flashes red and blue alternately.

7.Open second device's Bluetooth® menu and select "OpenMove by Shokz."Audrey will say "connected."

8.Turn your headphones off.

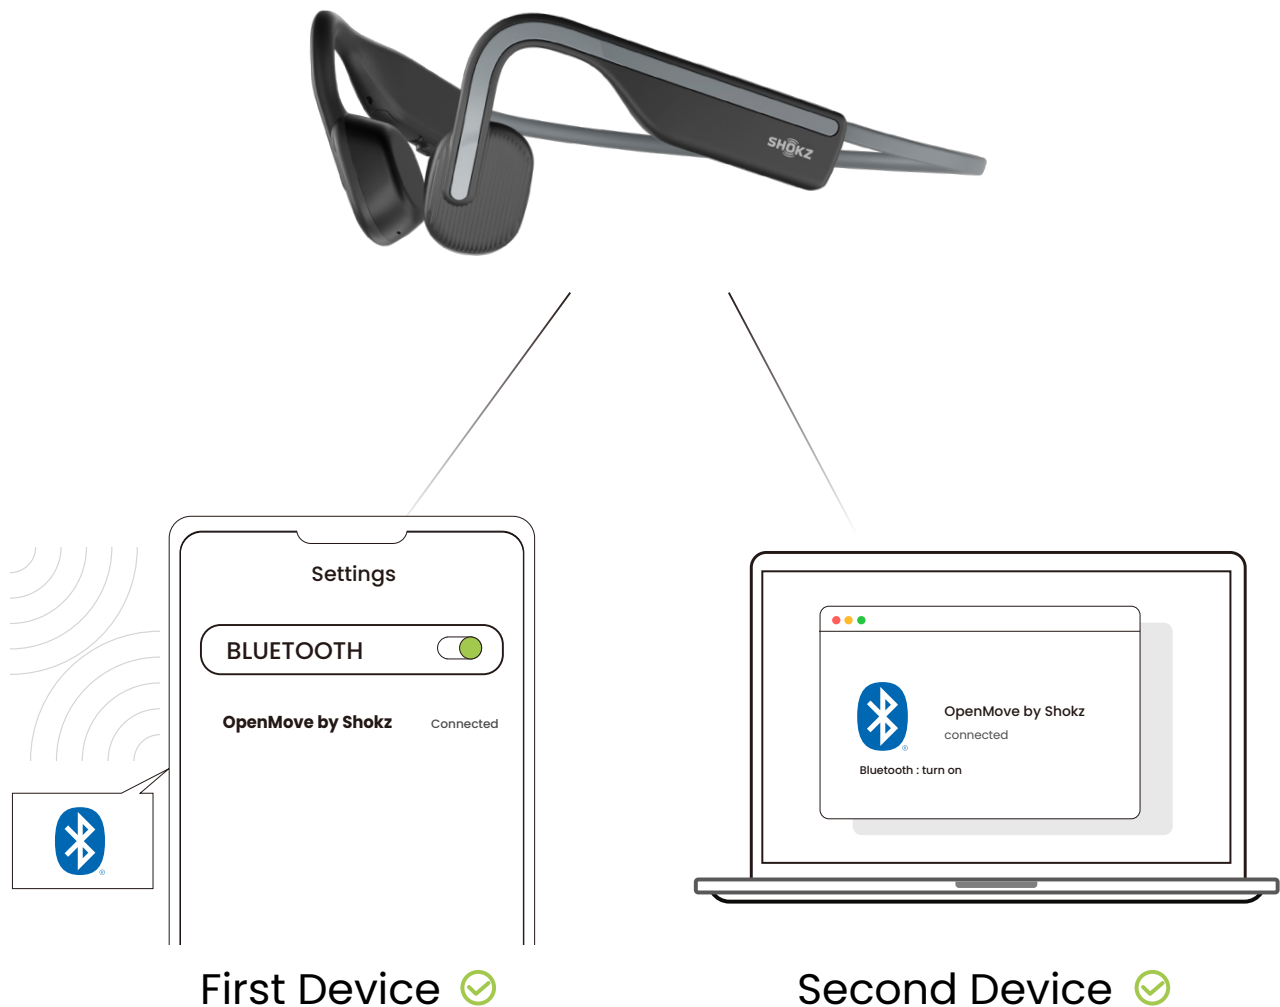


You will hear a beep, then Audrey will say "Welcome to Shokz, connected. Second device connected."


9. Turn your headphones on. Your headphones are now connected to both devices.


Turn Multipoint Pairing Off

 - OFF** Operate controls with headphones powered off.

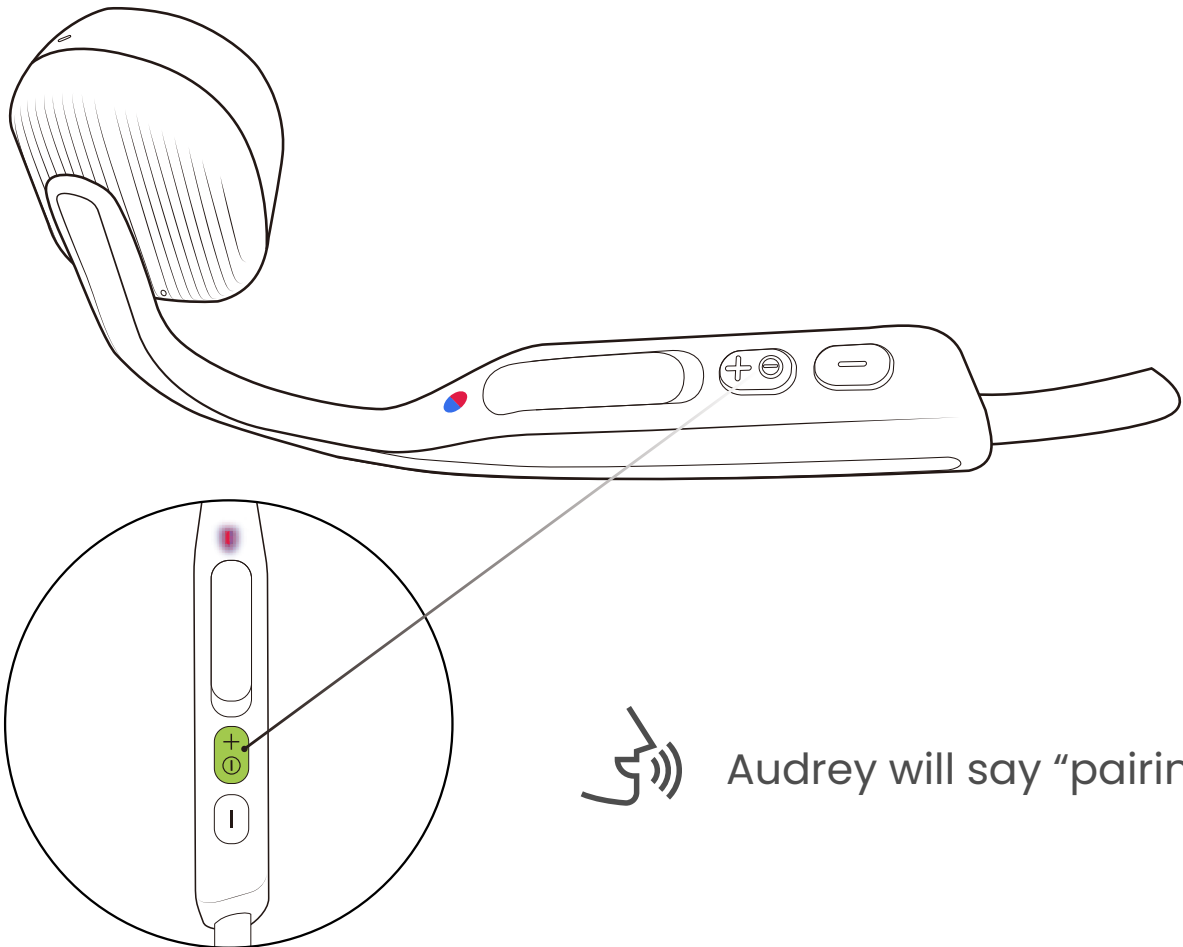

 1. Start with your headphones powered off.
2. Press and hold Volume + until Audrey will say "pairing" and the LED indicator flashes red and blue alternately.

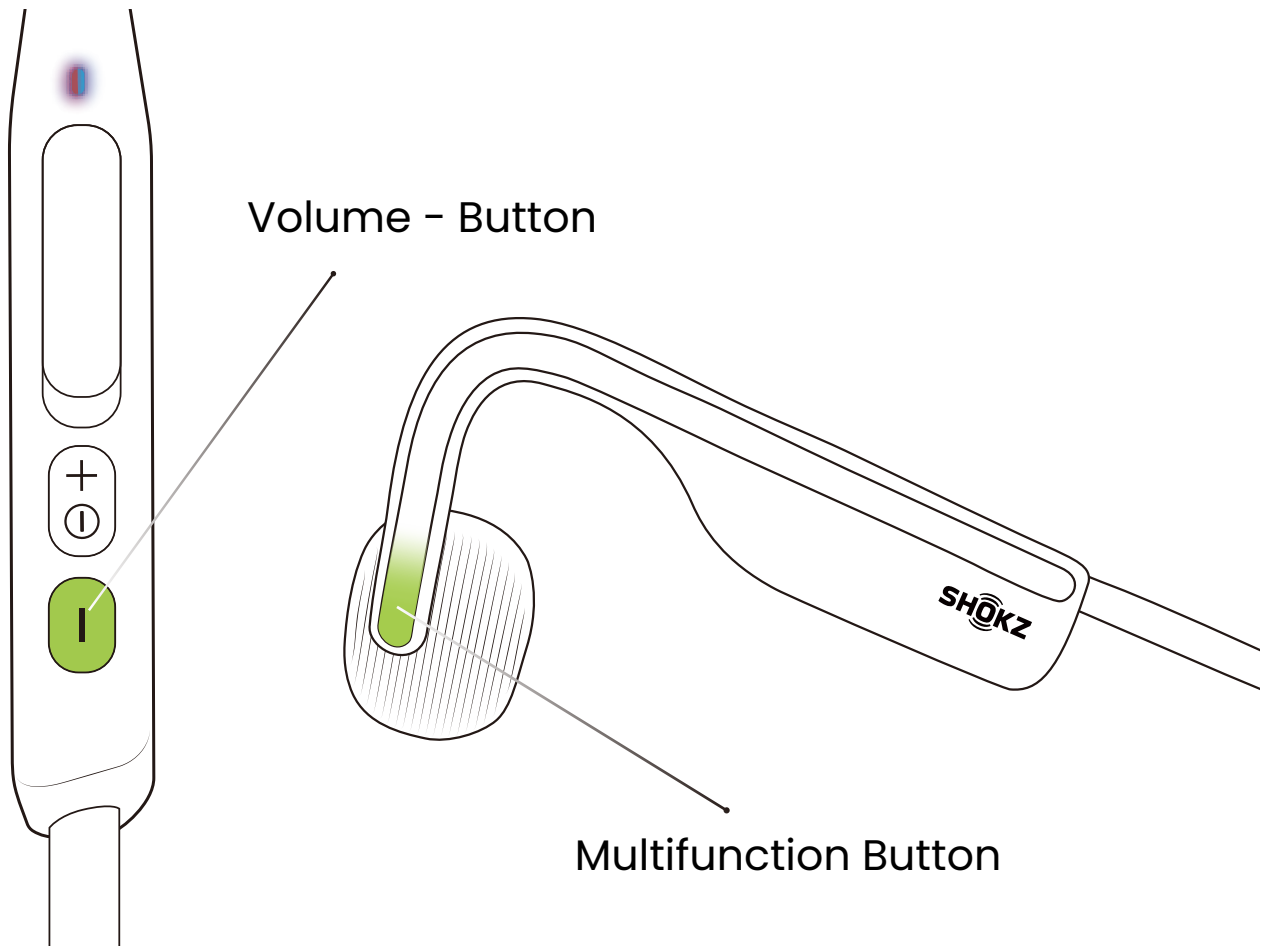


 Audrey will say "multipoint disabled."


3. Press and hold the multifunction button and Volume - button until Audrey will say "multipoint disabled."

Restore Factory Settings

 OFF Operate controls with headphones powered off.

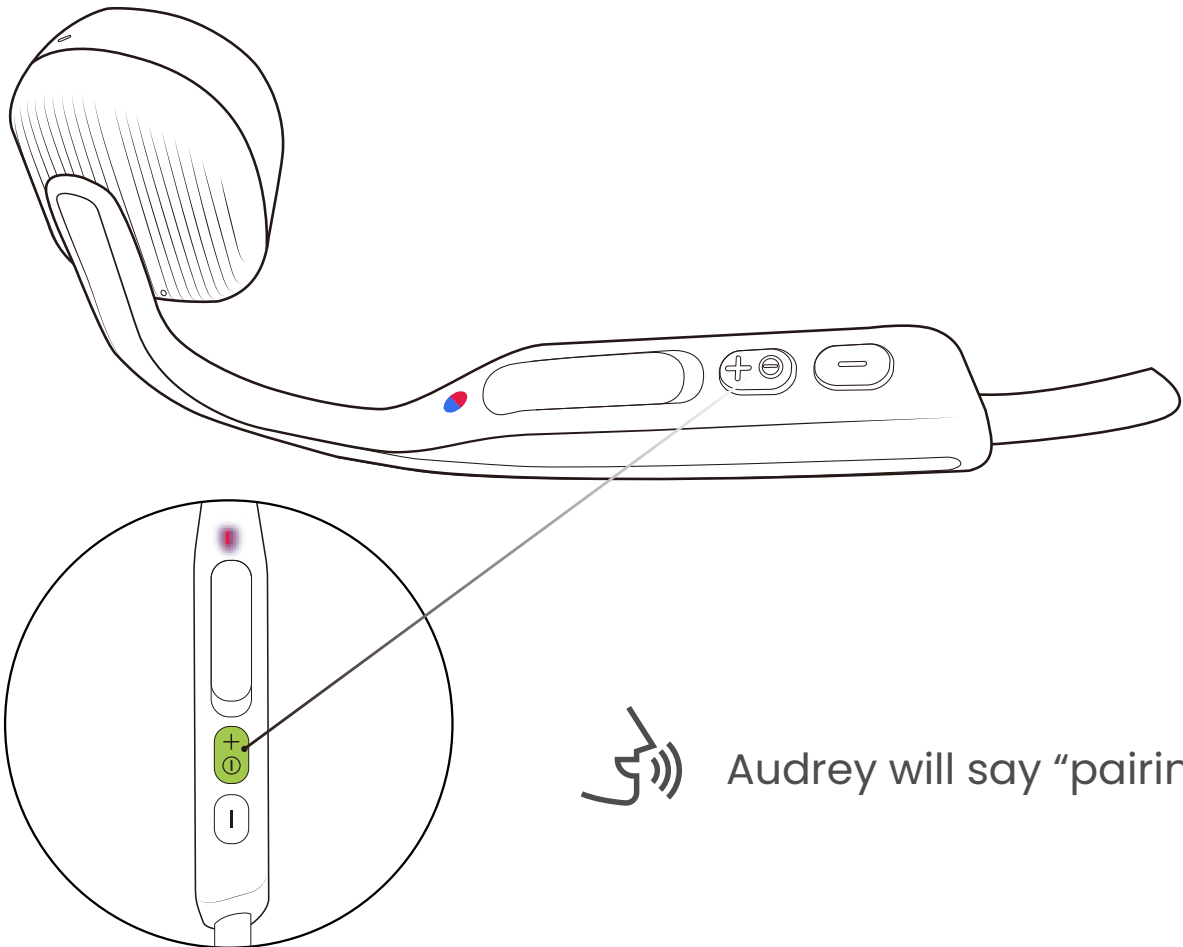

 1. Start with your headphones powered off.
2. Press and hold Volume + until Audrey will say "pairing." and the LED indicator flashes red and blue alternately.

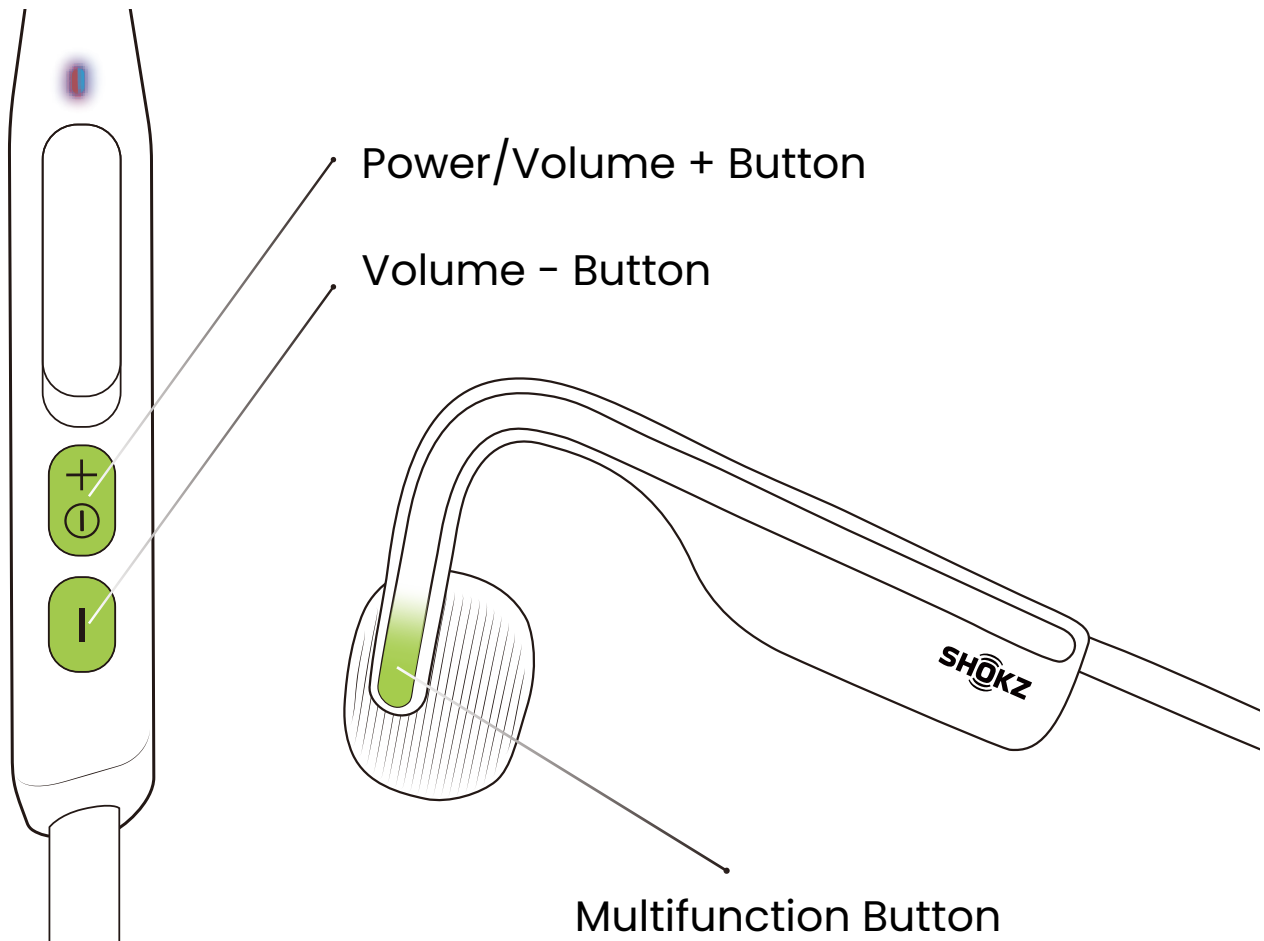


3. Press and hold the multifunction button, Volume – button and Volume + button until hear two beeps and feel the vibration.

4. Turn your headphones off. OpenMove is now reset and can be re-paired to your device.


Changing Languages

Your headphones have four built-in languages:
Chinese, English, Japanese and Korean.

 OFF Follow the instruction when
headphones powered off

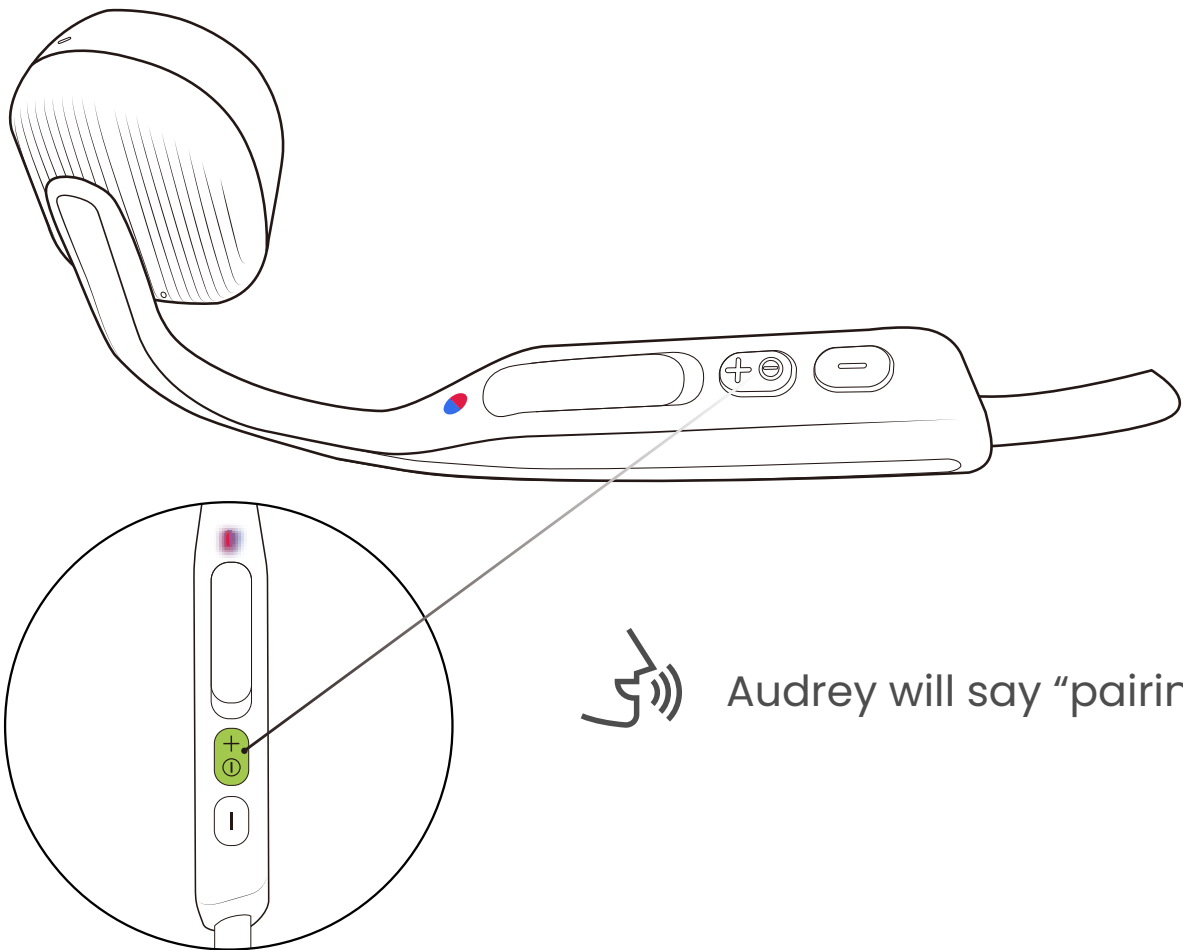

 1. Start with your headphones powered off.
2. Press and hold Volume + until Audrey will say "pairing" and the LED indicator flashes red and blue alternately.

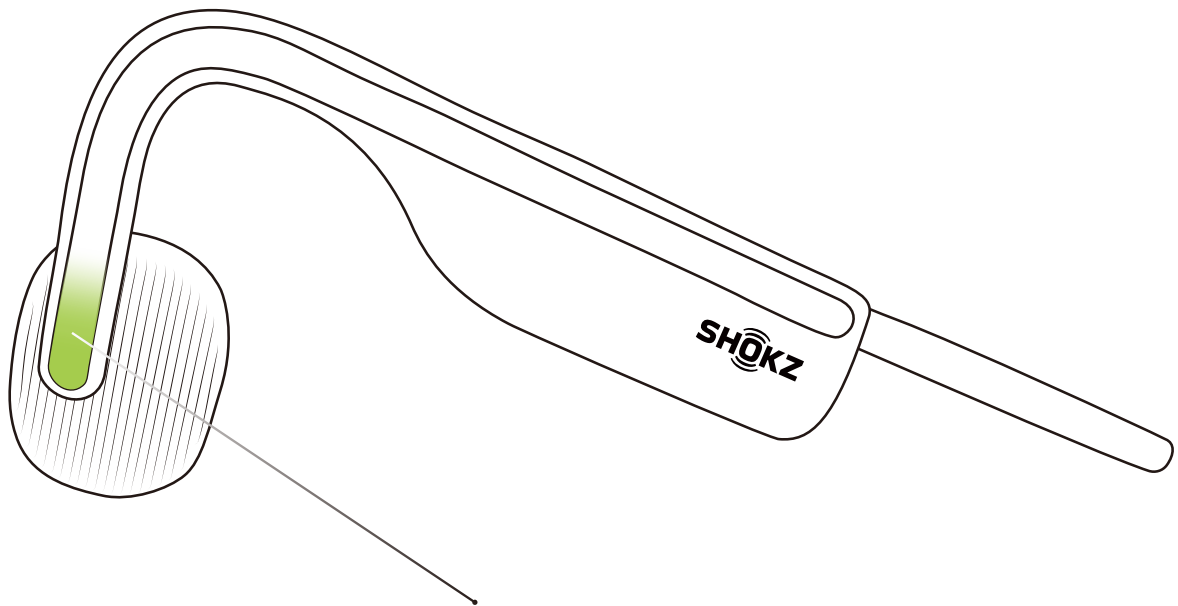


Multifunction Button

3. Double-press the multifunction button. Languages have been switched when you hear the corresponding language.

Care and Maintenance

Charging Tips

 - OFF** The headset will automatically shut down when charging

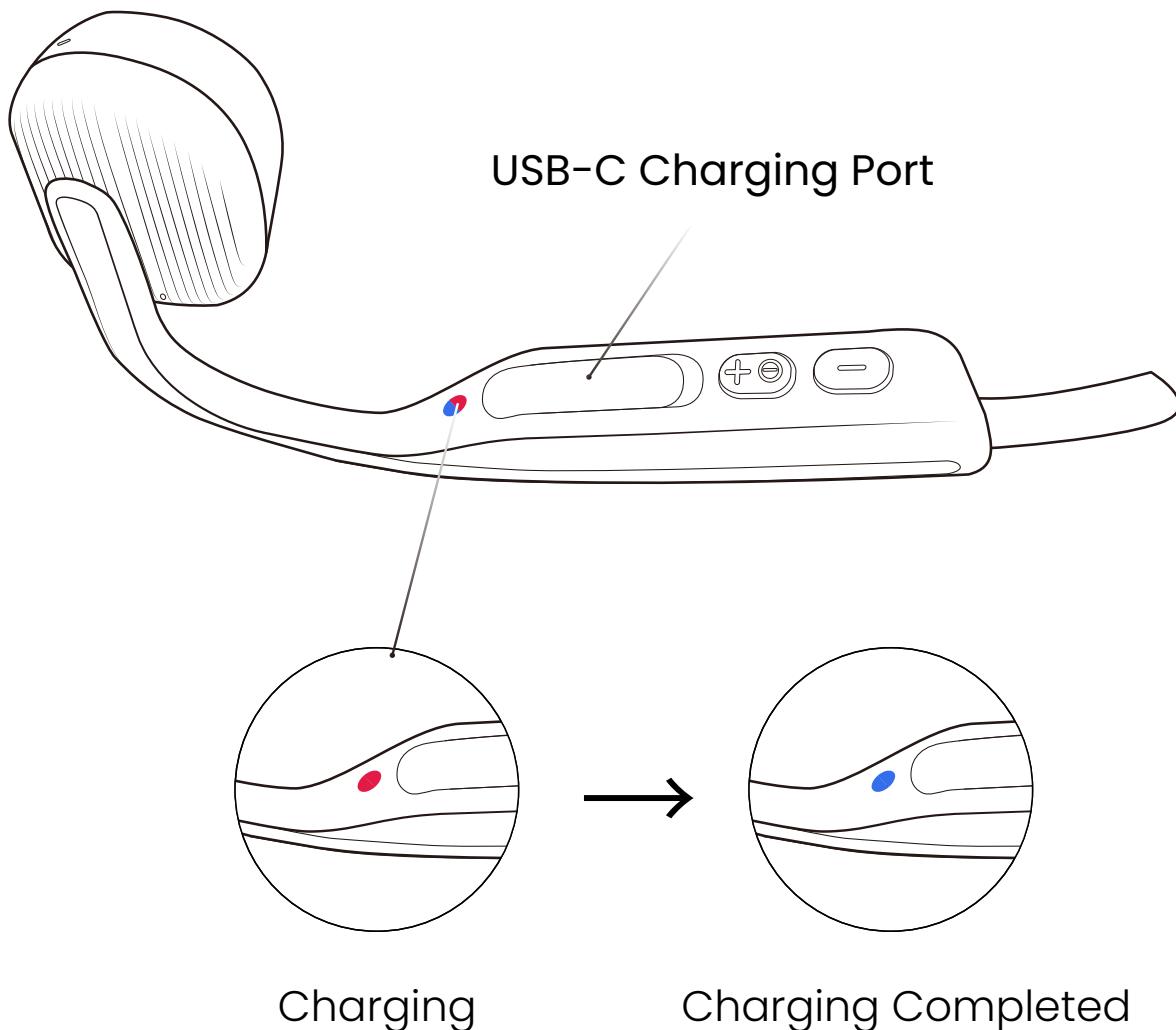

When the headphones are at low battery, there will be a “charge me” prompt and the red light will flash intermittently. Use the corresponding USB-C cable for charging.

The LED indicator will turn red during the charging process and the headphones will automatically turn off. The LED indicator will turn from red to blue when charging is complete.

Warranty

Your headphones are covered by a warranty.

Visit our website at <https://shokz.com/pages/warranty-landing> for details of the limited warranty.

 
*Failure to register will not affect your limited warranty rights.

Troubleshooting




If you have any trouble or problems, please visit
<https://shokz.com/pages/faq>
for more support!


What's in the Box

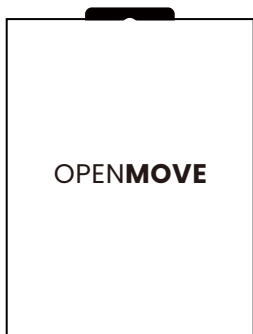

OpenMove
Box*1

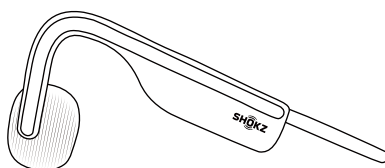 


OpenMove
headphone*1

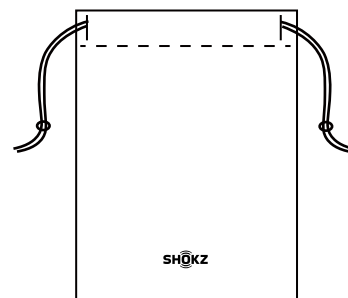 

OpenMove
Package*1



 USB-C Cable*1

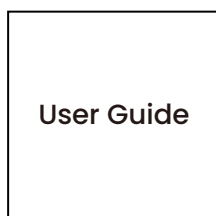

OpenMove
User Guide*1



OpenMove
Legal Statement*1

If any part of your product is damaged or missing, do not use it. Contact authorized Shokz dealer or Shokz customer service.

*Please note that the packaging envelope may vary depending on the sales region.

SHOKZ