

OpenRun Pro 2s

User Guide

SHOKZ S822

App



*Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries.
Google Play is a trademark of Google LLC.

Download the App

The Shokz App supports a variety of features, including turning Dolby Audio on/off, setting metronome frequency and volume, EQ Mode Switching, Multipoint Connection, Customizable Buttons, Firmware Updates, Find My Headphone, and Prompt Volume Settings. Take control of your music—download now and enjoy a more convenient user experience.

CATALOGUE

 
HOW IT WORKS	04
Headphone Controls	05
On / Off	06
Pairing	07
How to Wear	08
 BUTTON CONTROLS	 09
Volume	10
Multifunction Button	11
Check Battery Status	13
 ADDITIONAL FEATURES	 14
Dolby Audio	15
Metronome	16
EQ Mode Description	18
Switch EQ Modes	19
Find My Headphones	20
MultiPoint Pairing	21
Enable MultiPoint Pairing	22
Turn Multipoint Pairing Off	27
Restore Factory Settings	29
Changing Languages	31

CATALOGUE


CARE AND MAINTENANCE	33
Charging Notice	34
Storage and Maintenance	35
WARRANTY	36
WHAT'S IN THE BOX	37

HOW IT WORKS

Headphone Controls

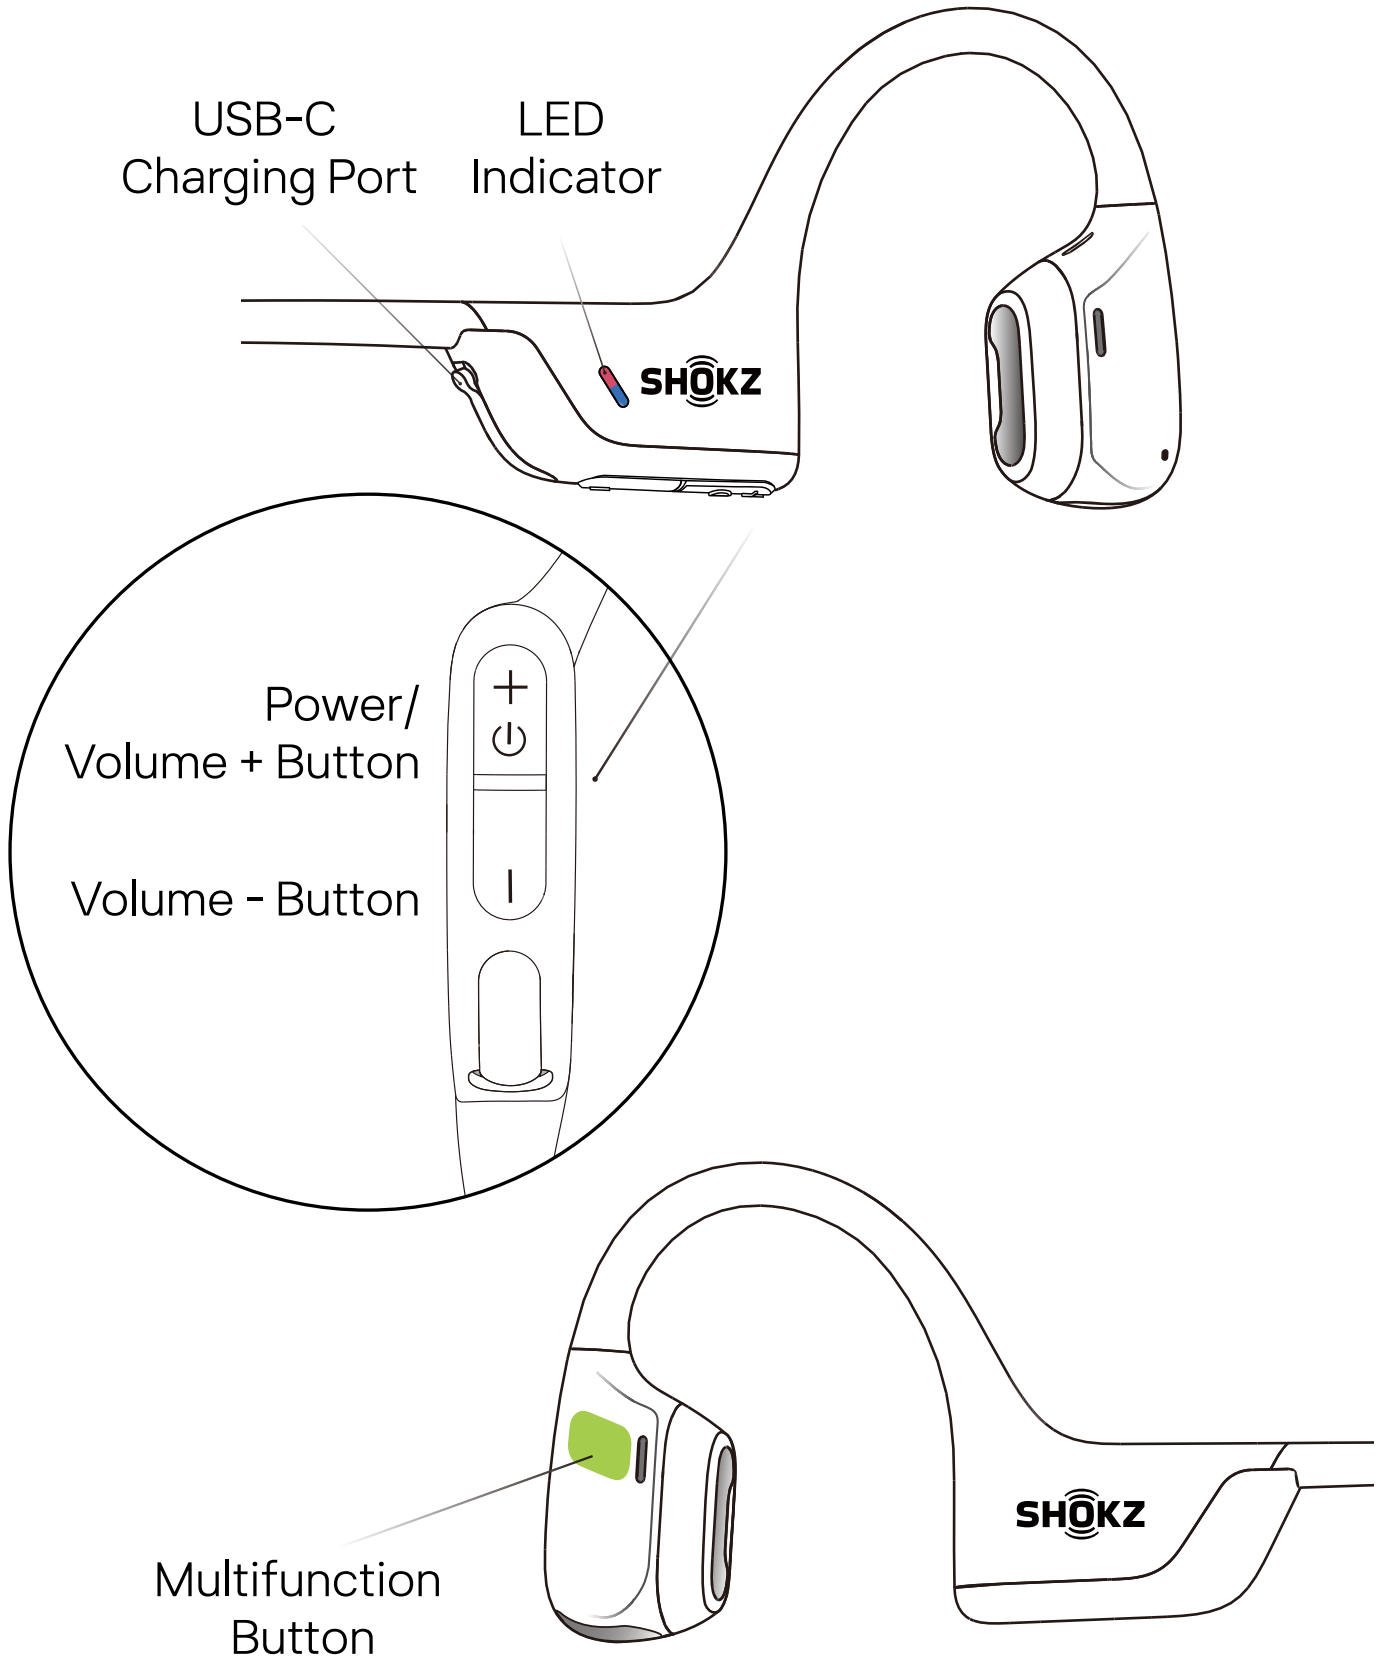

ON/OFF

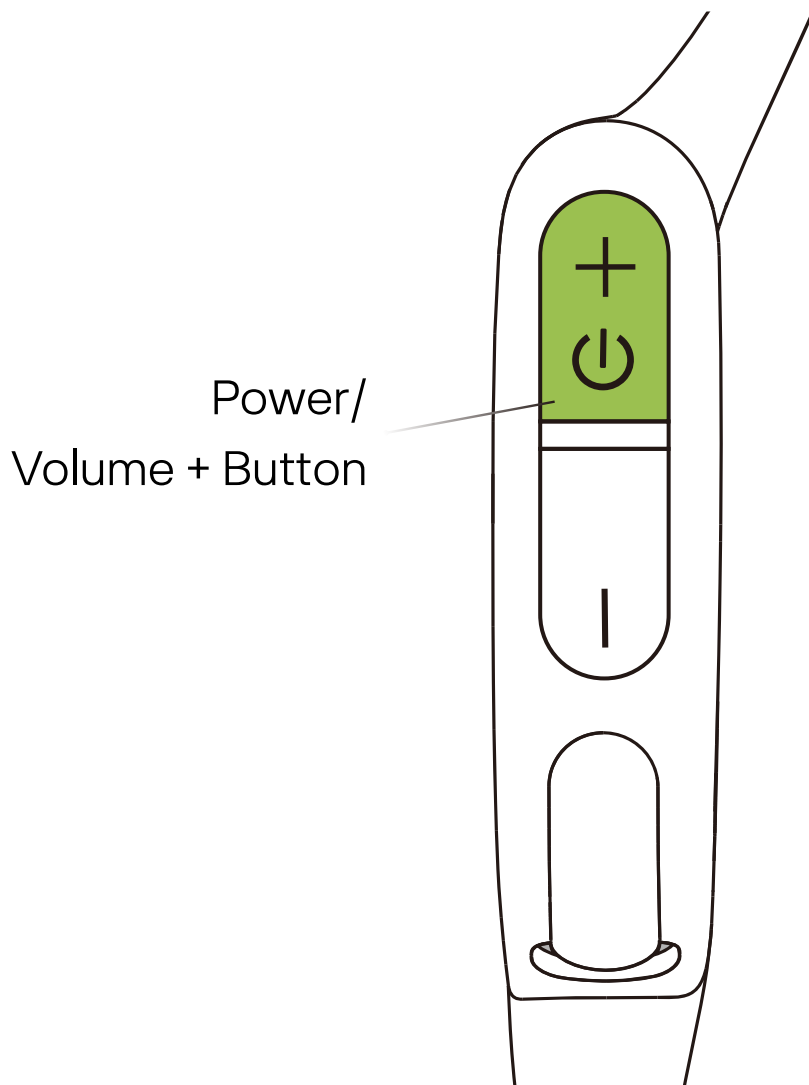 


Turn on the headphones :

Press and hold the Power/Volume + button until the LED indicator flashes blue.


Turn off the headphones :

Press and hold the Power/Volume + button until the LED indicator flashes red.

Pairing

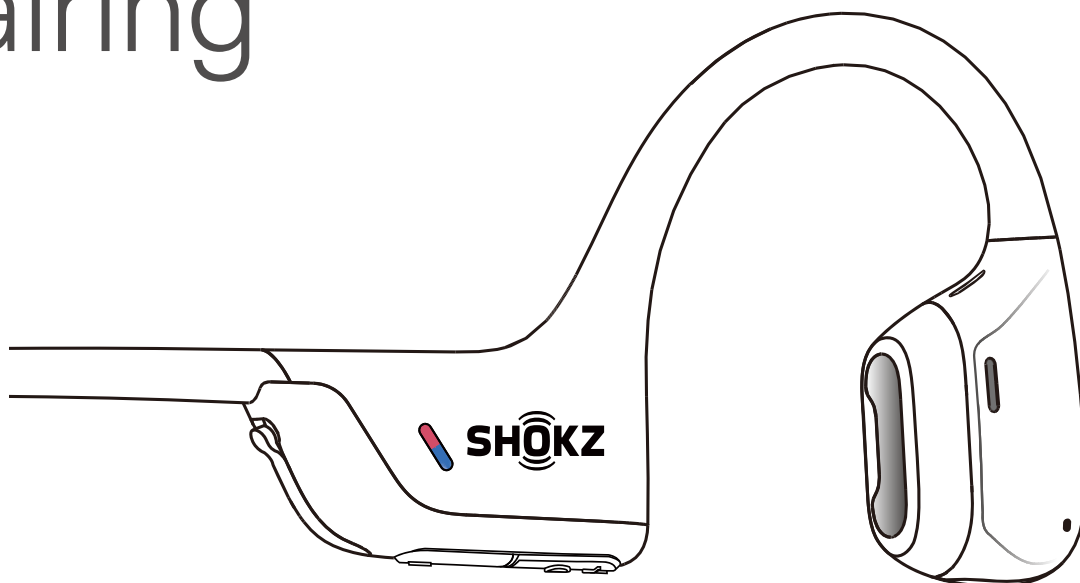


1. Start with OpenRun Pro 2s turned off.
2. Press and hold the Volume + button until the LED indicator flashes red and blue alternately.

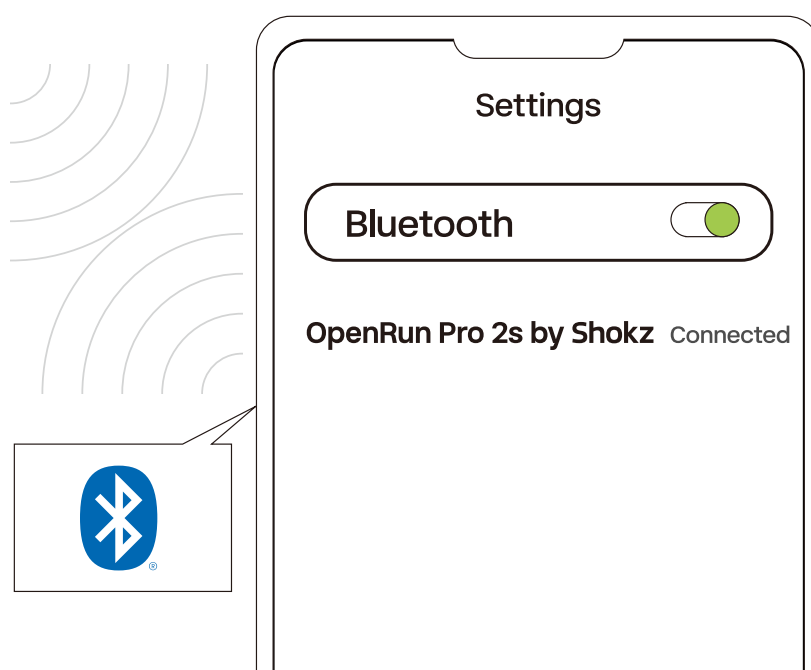

3. Open your device's Bluetooth settings and select **"OpenRun Pro 2s by Shokz"**. A prompt tone will sound.

How to wear

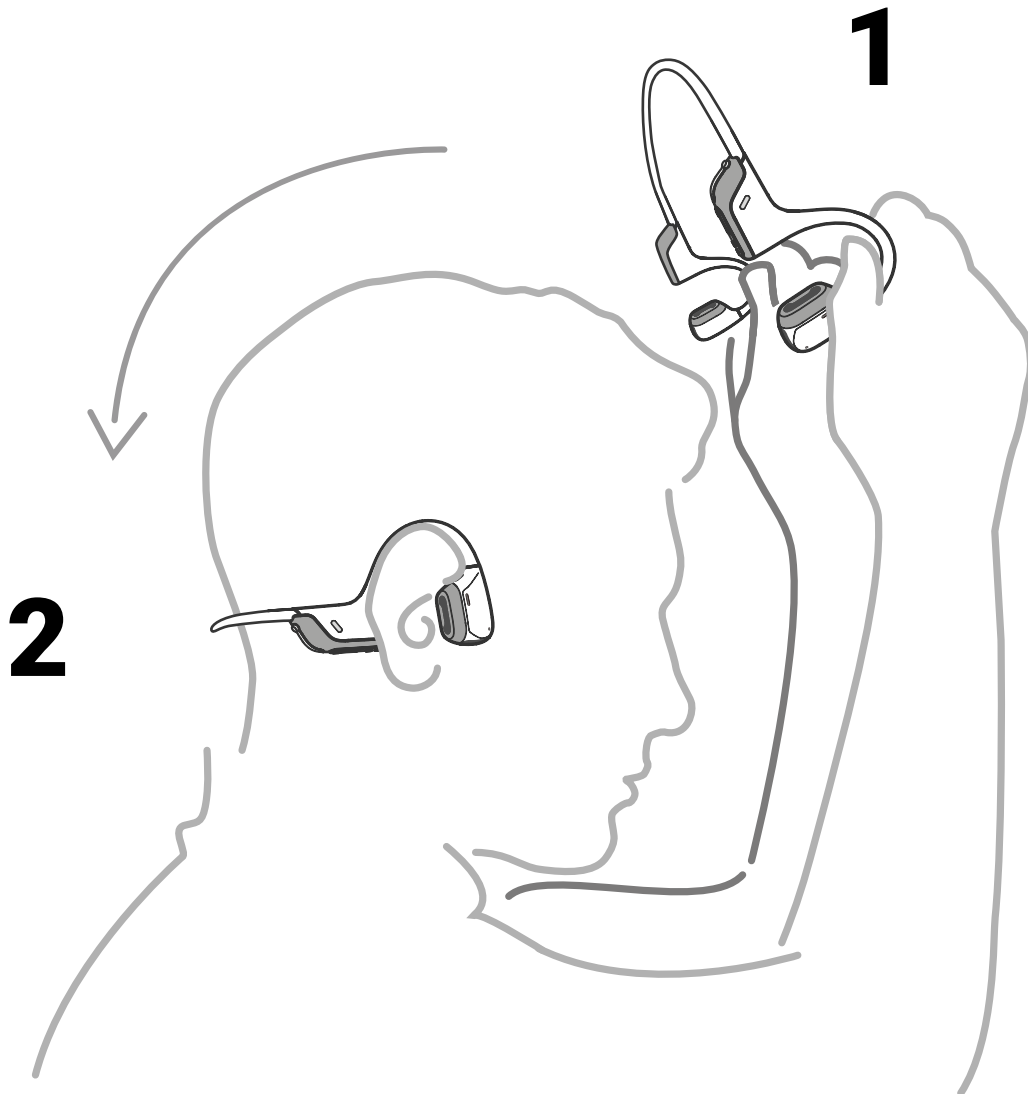

Pick up the headphones, bring them behind the back of the base of your neck, position the earhooks on your ears, then enjoy your music!

*Wearing your headphones the wrong way could cause discomfort.
The transducers should rest in front of your ears.

BUTTON CONTROLS


Volume



*Operate while audio is playing.

Power/
Volume + button

Volume - button

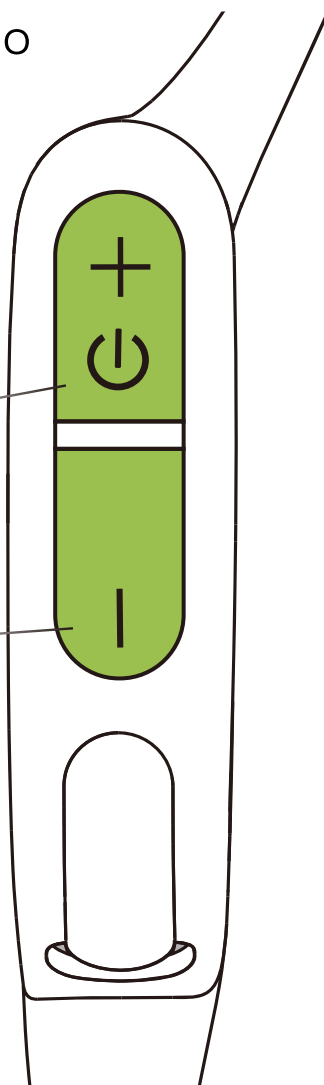

How to change volume:


While your audio is playing, adjust headphone volume by pushing either the Volume + or Volume - buttons.

*A “beep” will sound when the volume is at its max.



*Listening with headphones at high volume may affect your hearing and the audio will be distorted.

Multifunction Button

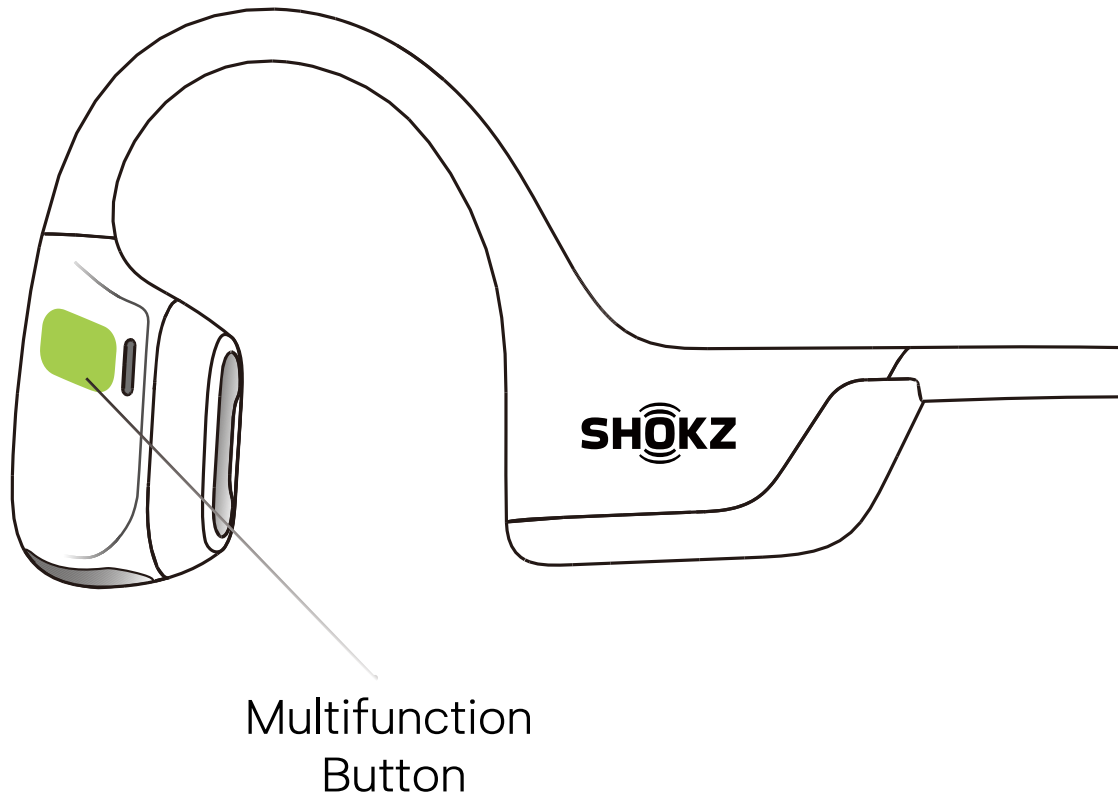

▶|| Play / Pause music: ●
Click x1

☎ Answer call: ●
Click x1

⏭ Next song: ● ●
While playing music, click x2

📞 End call: ●
Click x1

⏮ Previous song: ● ● ●
While playing music, click x3

Multifunction Button*

Play music	Click x1
Pause music	Click x1
Next song	While playing music, click x2
Previous song	While playing music, click x3
Activate voice assistant	Press and hold the Multifunction Button for 2 seconds.*
Turn on the metronome	Press and hold the Multifunction Button for 2 seconds.*
Switch language	While pairing, click x2
Answer call	Click x1
End call	During a call, click x1
Reject a call	Press and hold for 2 seconds
Switch Prompt Language	In pairing mode (red and blue lights flashing alternately), click the Multifunction Button x2
Answer a second call and decline the current call	Press and hold for 2 seconds while a second incoming call is ringing
Switch between calls (toggle to the held call)	During a multi-call, click the Multifunction Button x1
End the current call in a multi-call	During a multi-call, press and hold the Multifunction Button for 2 seconds

*The call-related functions above apply only to phone calls, and do not apply to voice or video calls made through third-party applications.

*After updating the headphones to the latest firmware version through the Shokz App, this press-and-hold operation will be used to turn the metronome on/off.

*Please update the headphones to the latest firmware version in the Shokz App to support turning the metronome on/off with the button.


Check Battery Status



Operate controls while audio is not playing.

Power/
Volume + button

Volume - button

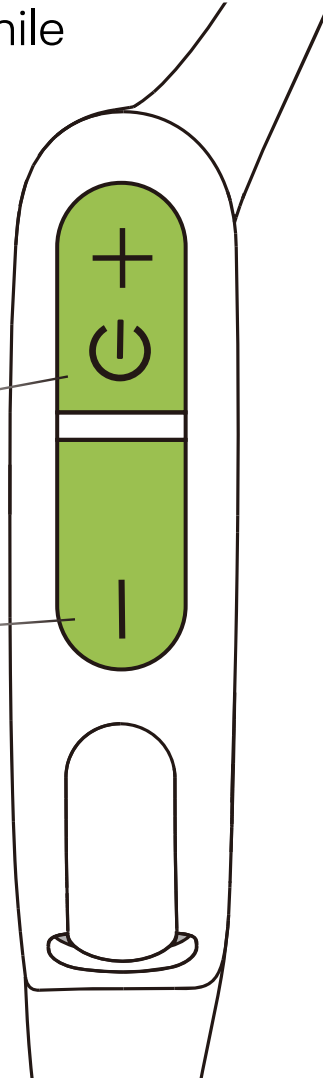

How to check battery status:


Click the Volume + or Volume - button while music is paused.



*Voice prompt: "Battery high/Battery medium/Battery low/Charge me."

ADDITIONAL FEATURES


Dolby Audio

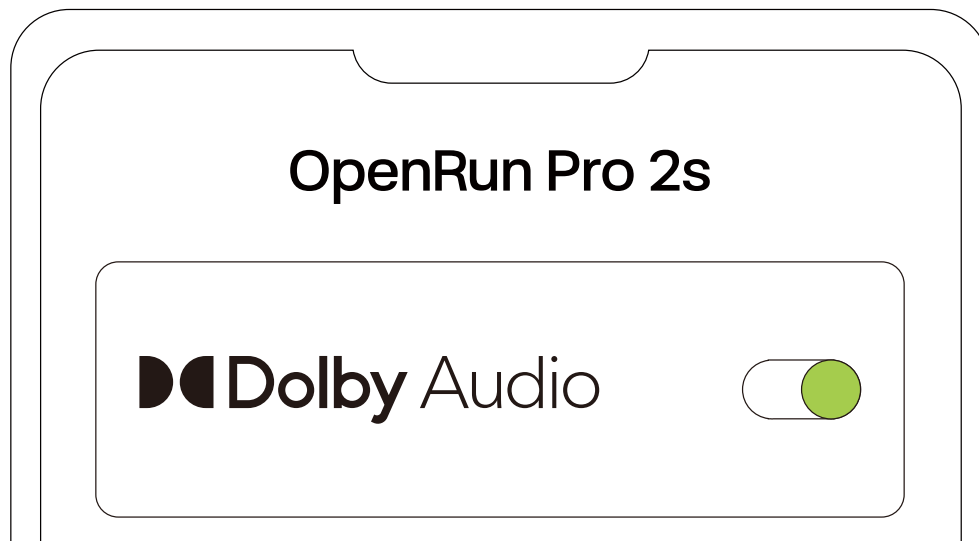

*Dolby Audio is off by default.

1. As the world's first bone conduction headphones that support Dolby Audio, the headphones deliver a wider soundstage and richer sound details when Dolby Audio is enabled, further enhancing the listening experience.
2. Before turning on Dolby Audio, make sure the headphones are paired with your phone via Bluetooth and connected to the Shokz App.
3. Go to the Shokz App home page and tap the "Dolby Audio" switch to turn Dolby Audio on or off.

Metronome

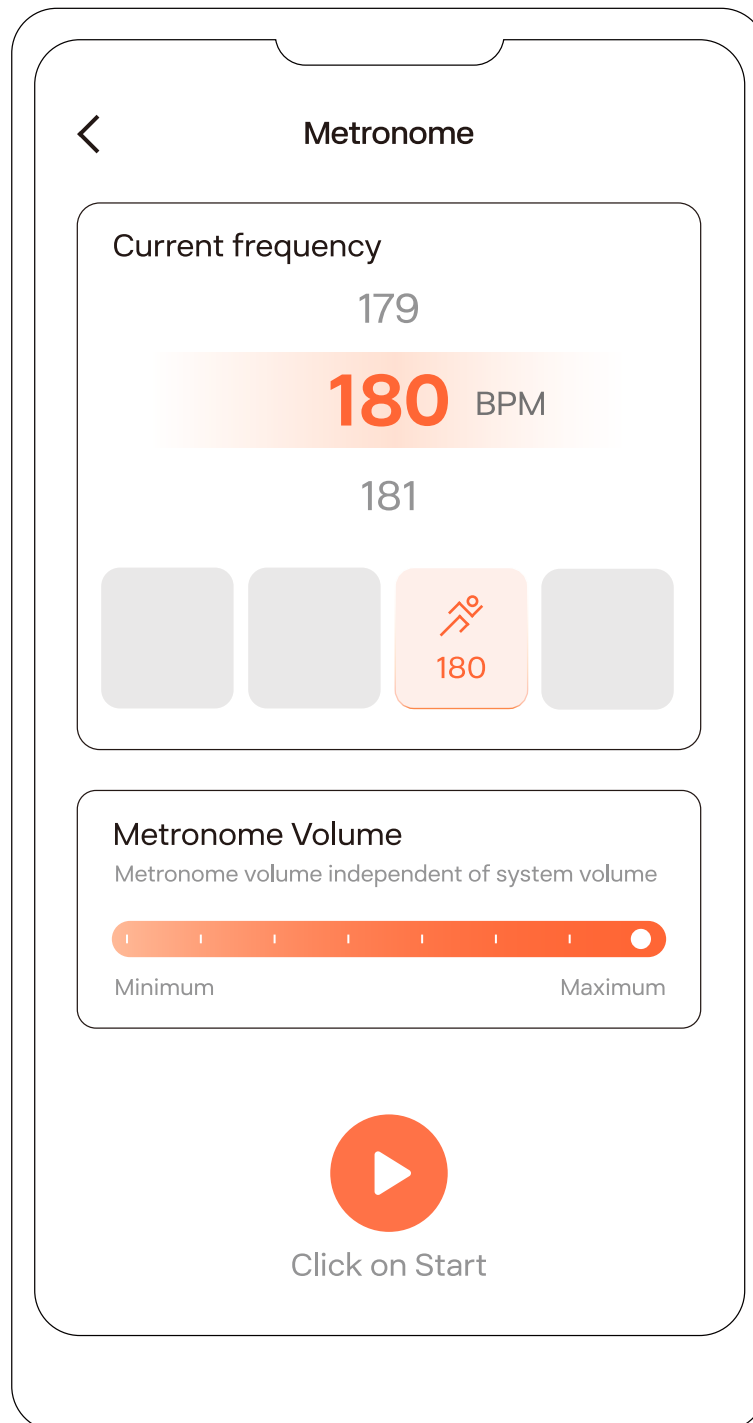


*Note: The metronome frequency adjustment precision is 1 beat per minute, and the default frequency is 180 beats per minute. Metronome volume can be adjusted independently and is not affected by the headphone volume setting.


Metronome

1. The headphones feature a built-in professional sports metronome that provides precise rhythm prompts. It can play at the same time as music or audiobooks to help you maintain your exercise rhythm.
2. Before using the metronome, make sure the headphone firmware is updated to the latest version. If you are using an older version, go to the Shokz App to complete the update.
3. When setting the metronome through the Shokz App, make sure the headphones are paired with your phone via Bluetooth and connected to the Shokz App.
4. Go to the Shokz App home page and tap "Metronome" to enter the settings page.
5. Adjust the metronome frequency and volume, then tap the start button. The headphones will play the metronome according to the frequency and volume you set.
6. The metronome can be used independently without connecting to phone Bluetooth. By default, press and hold the headphone Multifunction Button to turn it on/off. You can also change the operation method through "Customize Controls" in the Shokz App.

EQ Mode Description

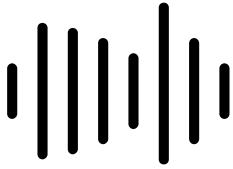**Standard Mode:**

Balanced frequency, suitable for listening to music on a daily basis.

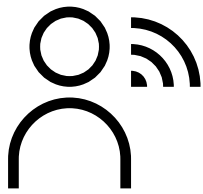**Vocal Mode:**


Enhance the mid frequency, suitable for listening to music while reading e-books and attending online courses.

**Increase Bass:**

Enhance the low frequency, suitable for listening to music with a strong rhythm in a sports setting.

**Increase Treble:**

Enhance the high frequency, suitable for listening to elegant, light music while resting.

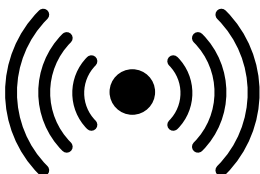**Classic:**

This mode uses only the bone conduction driver, with the air conduction driver turned off. It delivers a more traditional bone conduction experience with stronger vibrations and open-ear clarity.

*Note: Using this mode may consume more battery power.

*Before using Classic Mode, turn on "Display Classic" in "More Settings".



*Note: Prolonged use at high volume may damage your hearing, and distortion may occur at high volume levels.


Switching EQ Modes



Operate controls while music is playing

Power/
Volume + button

Volume - button

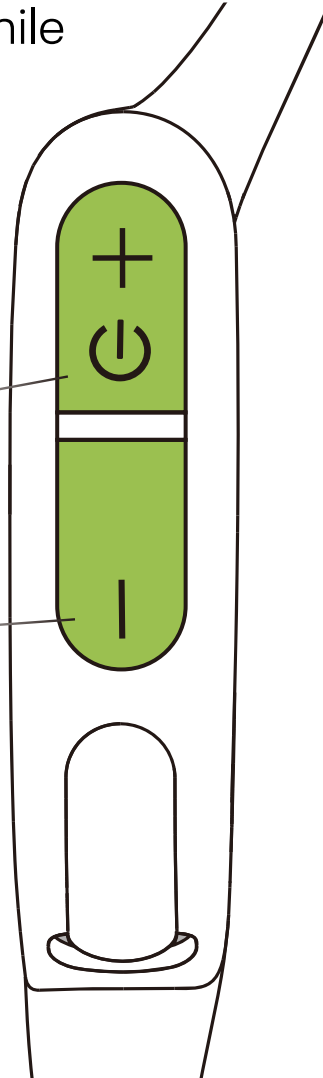


How to switch EQ mode:

Press and hold both buttons (Power/Volume + Button and Volume - Button) while music is playing until you hear a beep.

*You can also use the Shokz App to change the EQ mode


Find My Headphones

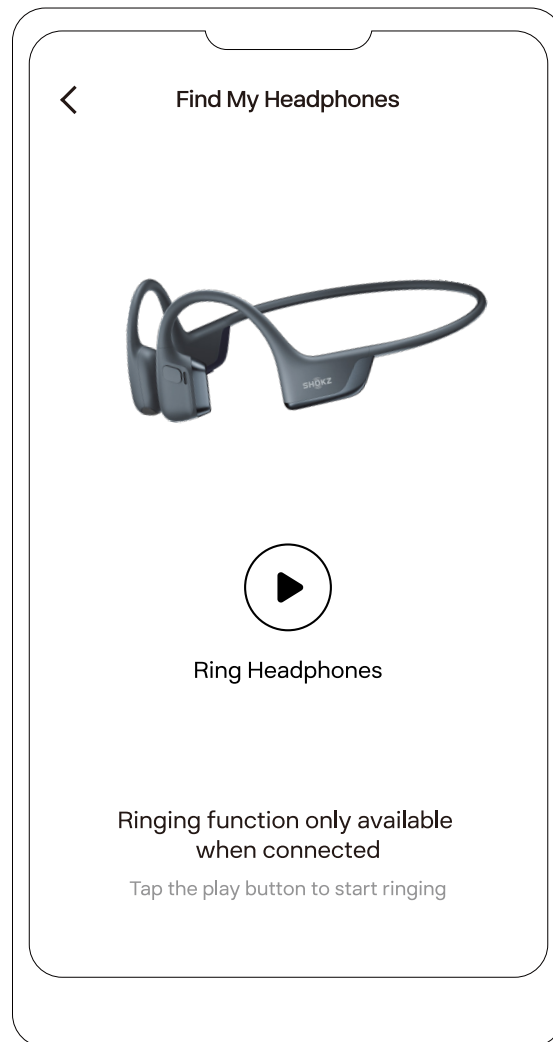

*Note: Do not use Find My Headphones while wearing the headphones.

1. Before using Find My Headphones, make sure the headphones are paired with your phone via Bluetooth and connected to the Shokz App.
2. Go to the Shokz App home page, then tap "More Settings" > "Find My Headphones".
3. Tap the "Play" button to start ringing.

Multipoint Pairing

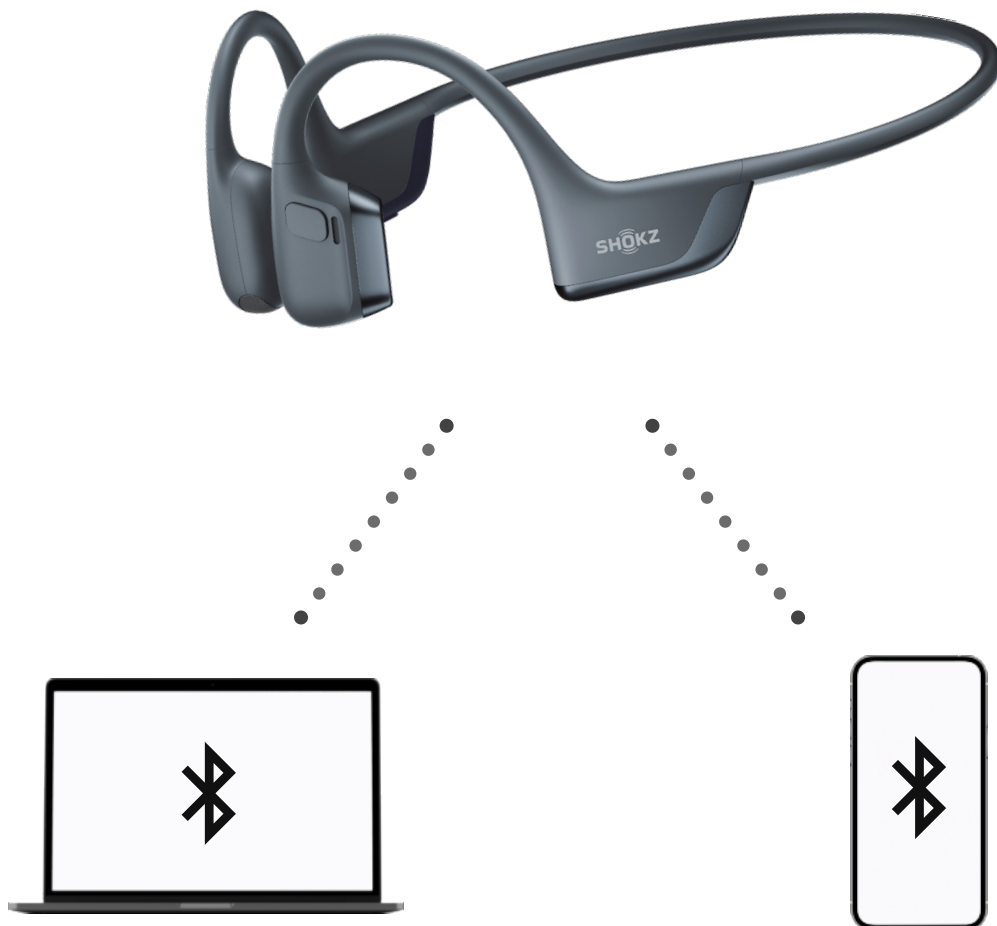


Connect to Two Devices Simultaneously

One pair of headphones can connect to two Bluetooth devices at the same time, enabling seamless switching between devices. Handle multiple tasks with ease.


Enable MultiPoint Pairing

OFF Operate controls with headphones powered off.

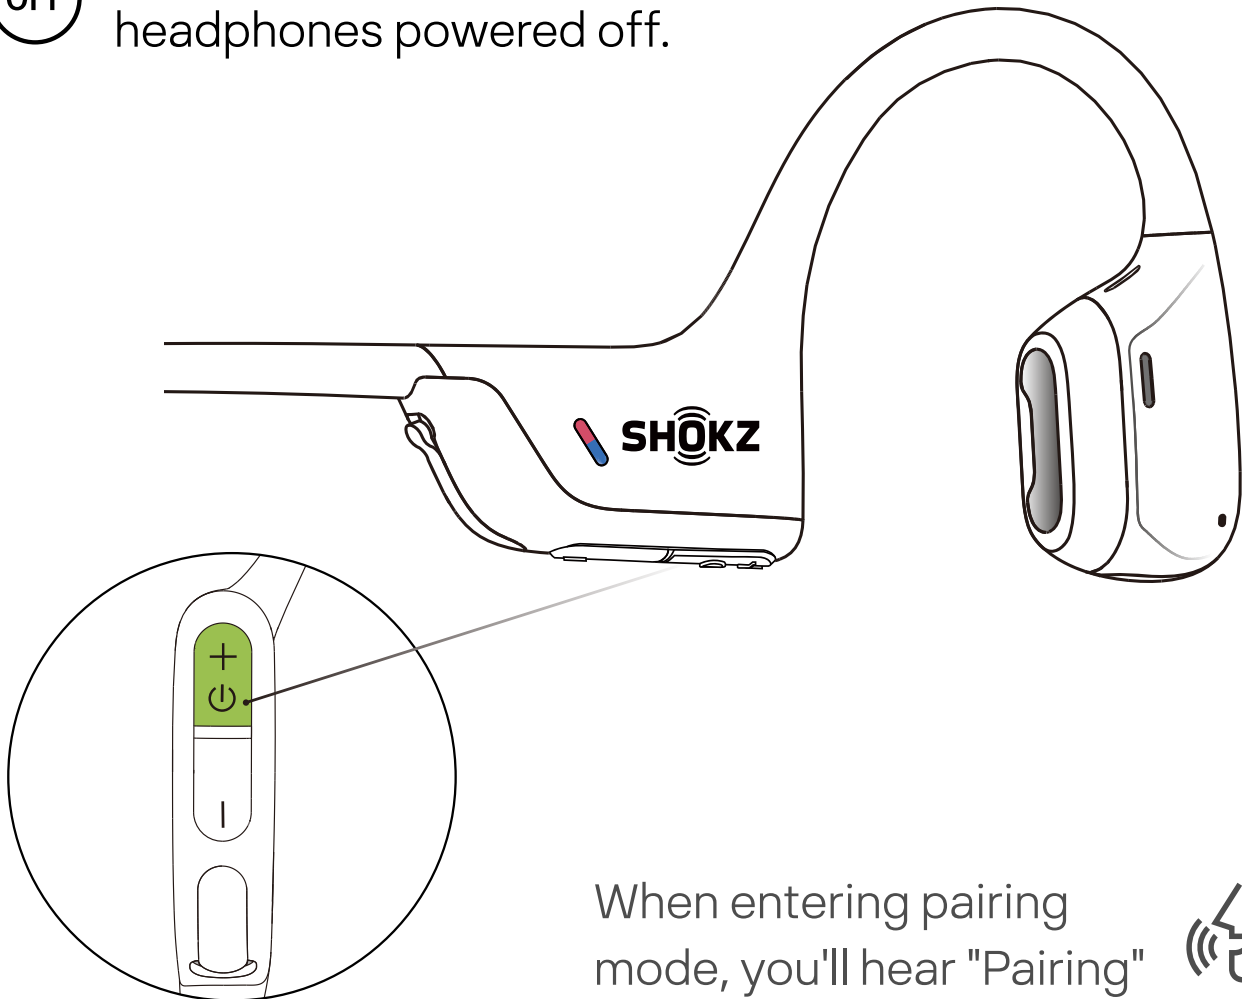


1. Ensure the headphones are powered off.
2. Press and hold the Power / Volume + button until the red and blue indicator lights flash alternately to enter pairing mode. You will hear "Pairing".

*You can also use the Shokz App for convenient multipoint pairing management.

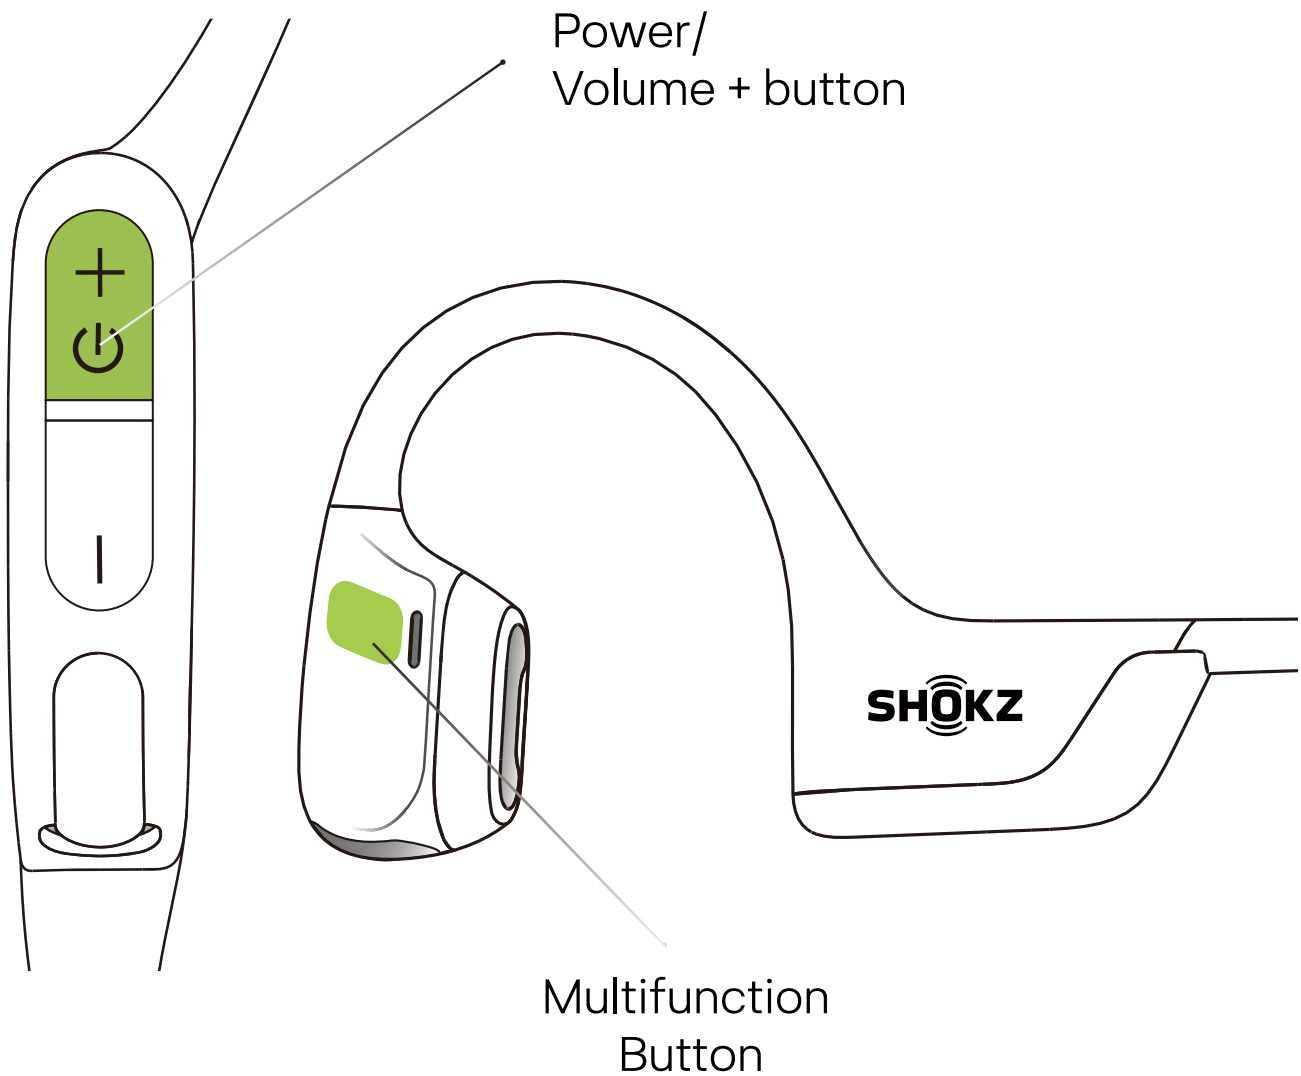


3. Press and hold both the Multi-function button and the Power / Volume + button until you hear a “beep” tone.

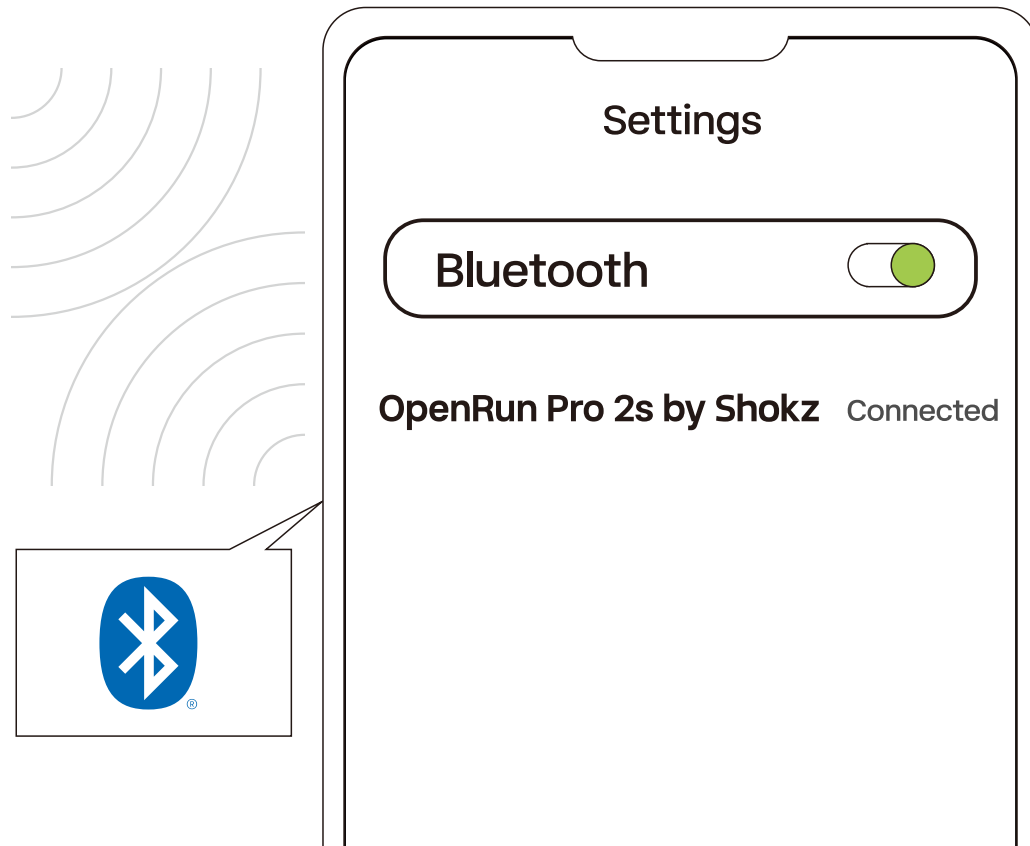

First Device

4. Open the Bluetooth pairing list on Device 1 and select **"OpenRun Pro 2s by Shokz"** to connect.
5. Power off the headphones.

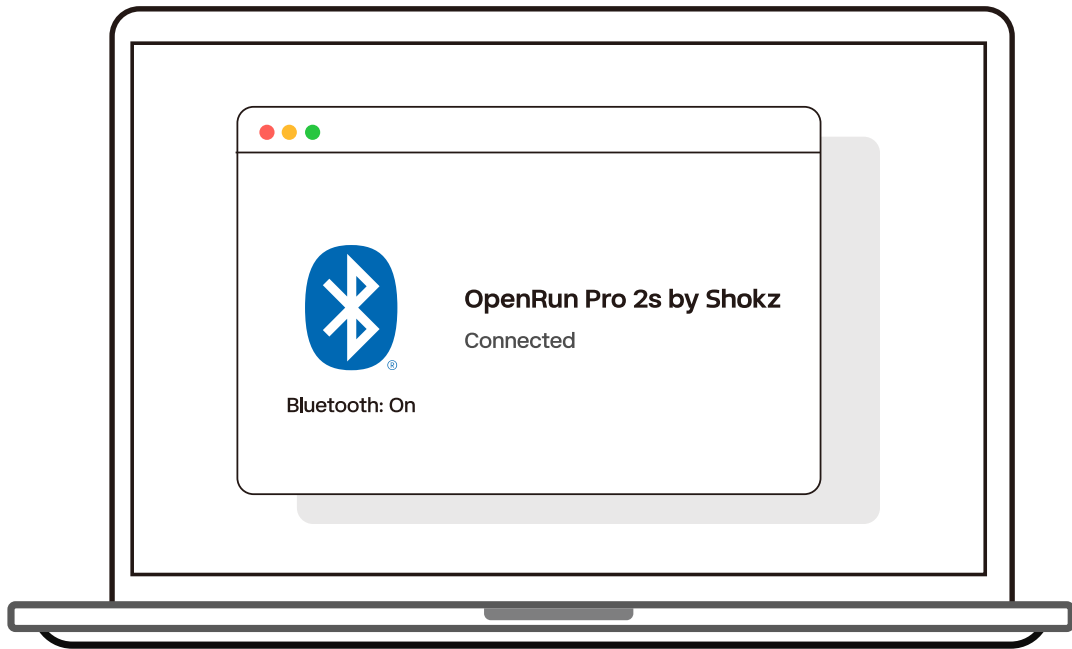

Second Device

6.Re-enter pairing mode.

7.Open the Bluetooth pairing list on Device 2 and select **"OpenRun Pro 2s by Shokz"** to connect.

8.Power off the headphones again.




9. Press and hold the Power / Volume + button to turn on the headphones. After the power-on prompt, the headphones will automatically connect to both devices, with two connection confirmation tones.

Turn MultiPoint Pairing Off



Operate controls with headphones powered off.

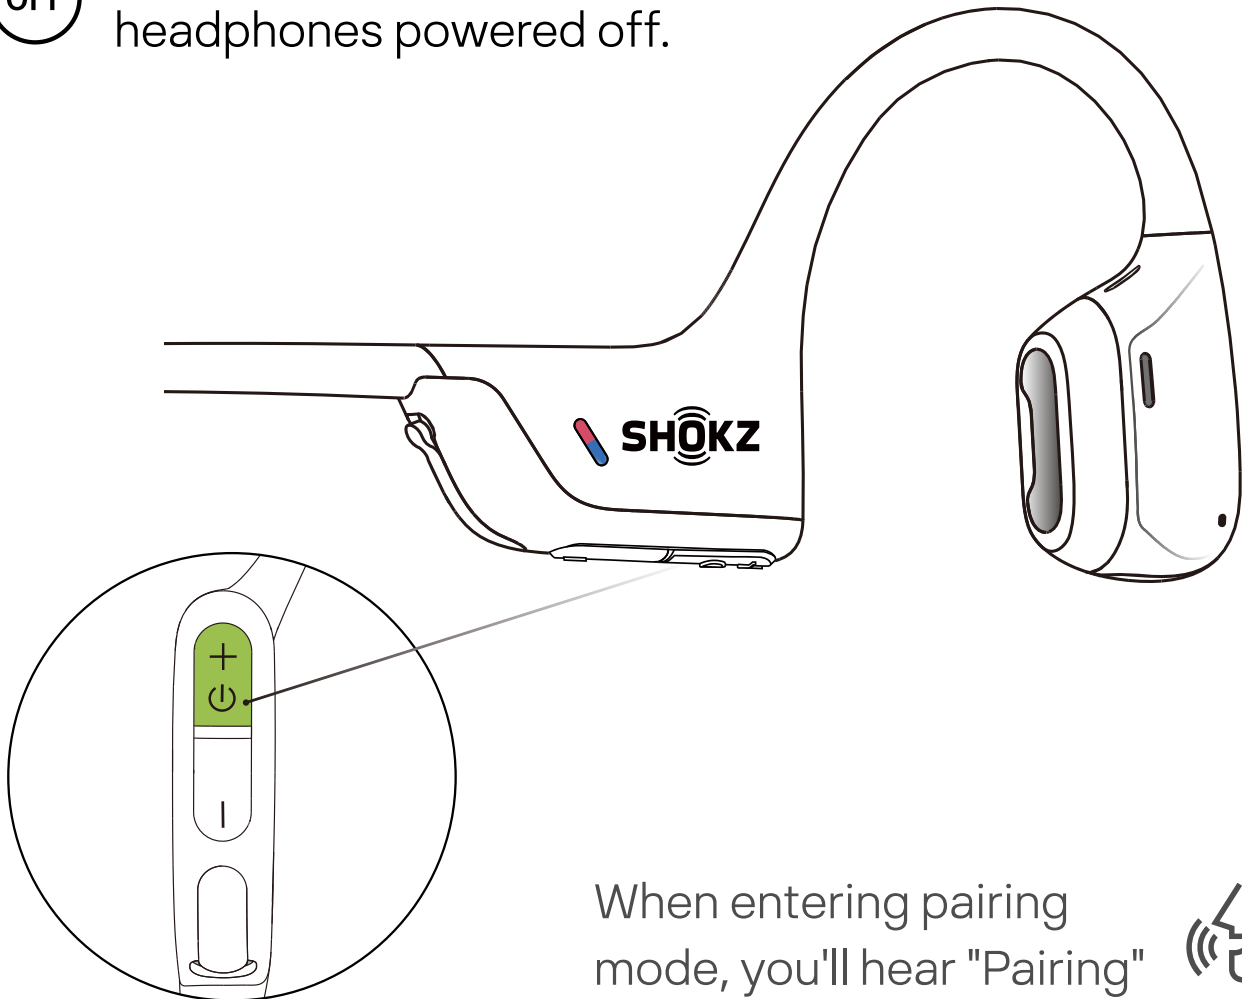


When entering pairing mode, you'll hear "Pairing"



1. Start with your headphones powered off.
2. Press and hold Volume + until you hear "Pairing" and the LED indicator flashes red and blue alternately.


*You can also use the Shokz App for convenient multipoint pairing management.

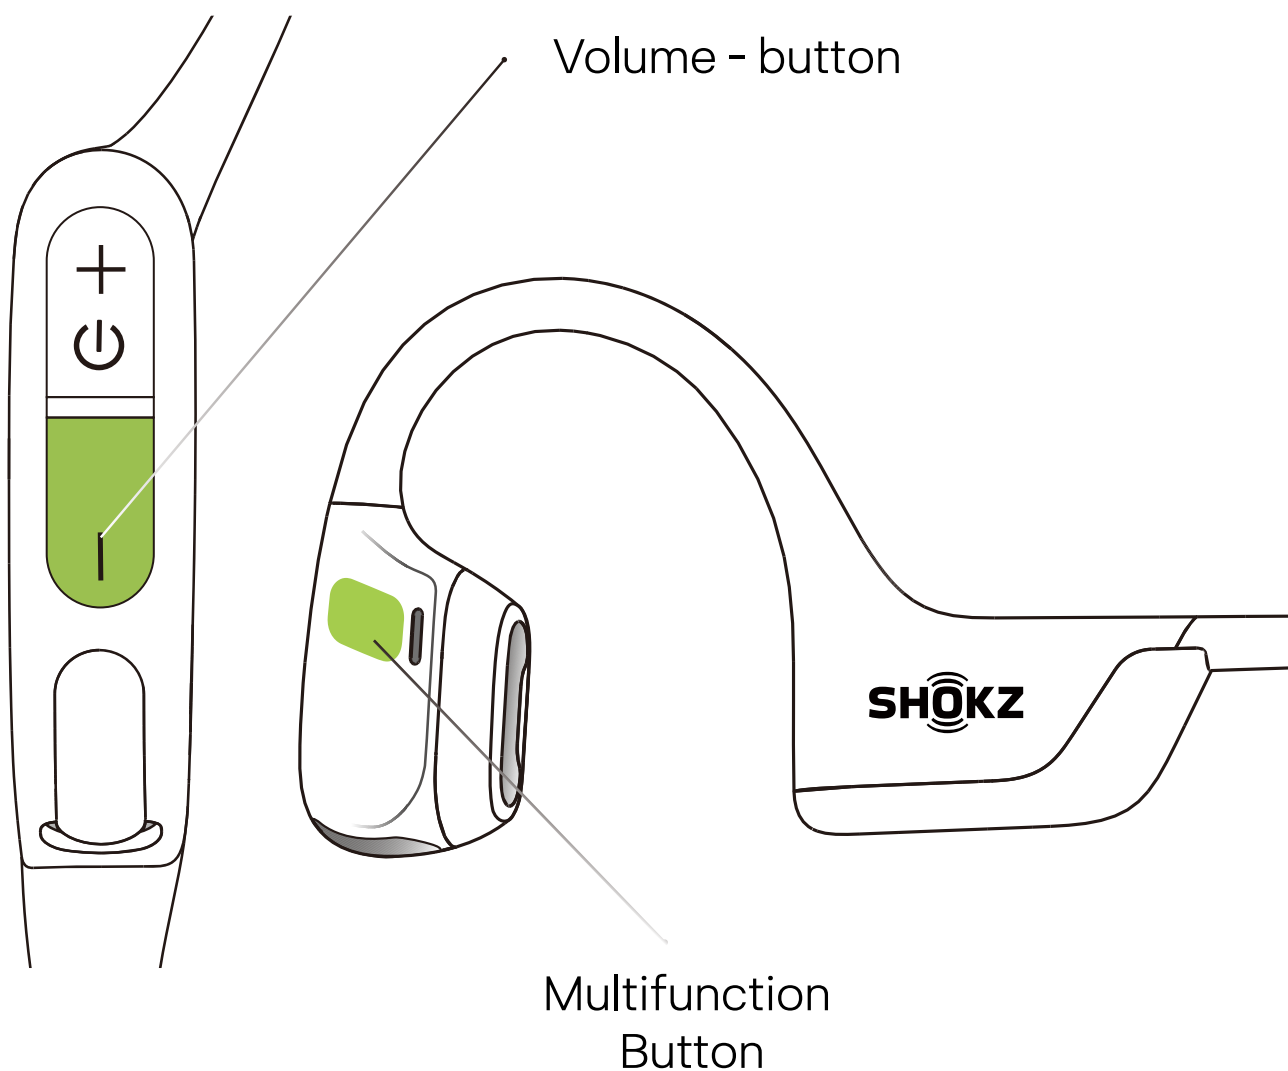

3. Press and hold the Multifunction Button and Volume - button until the headphones emit a prompt sound.

Restore Factory Settings


OFF Operate controls with headphones powered off.

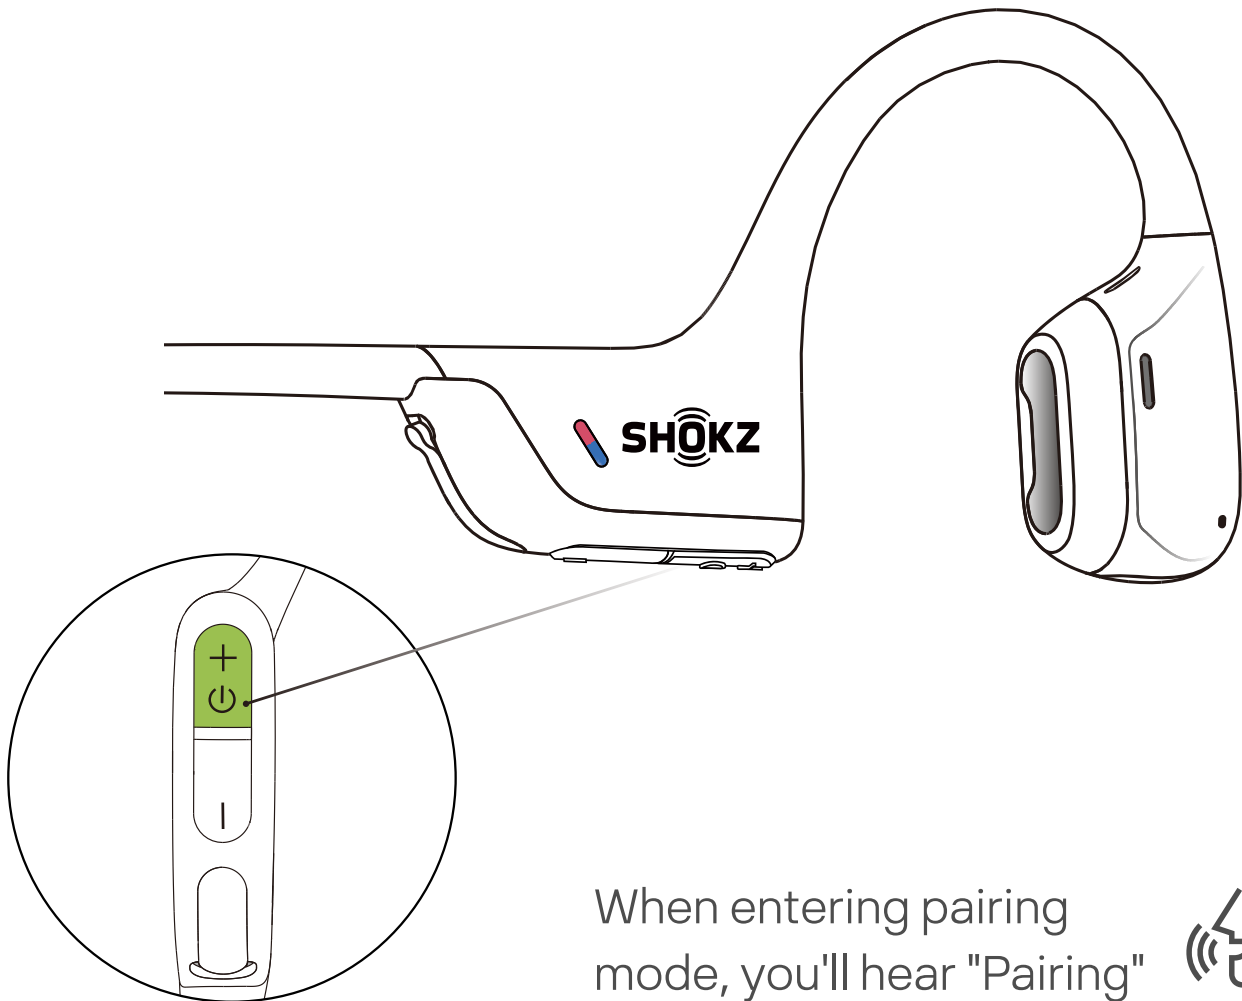

When entering pairing mode, you'll hear "Pairing"



1. Start with your headphones powered off.
2. Press and hold Volume + until you hear "Pairing" and the LED indicator flashes red and blue alternately.

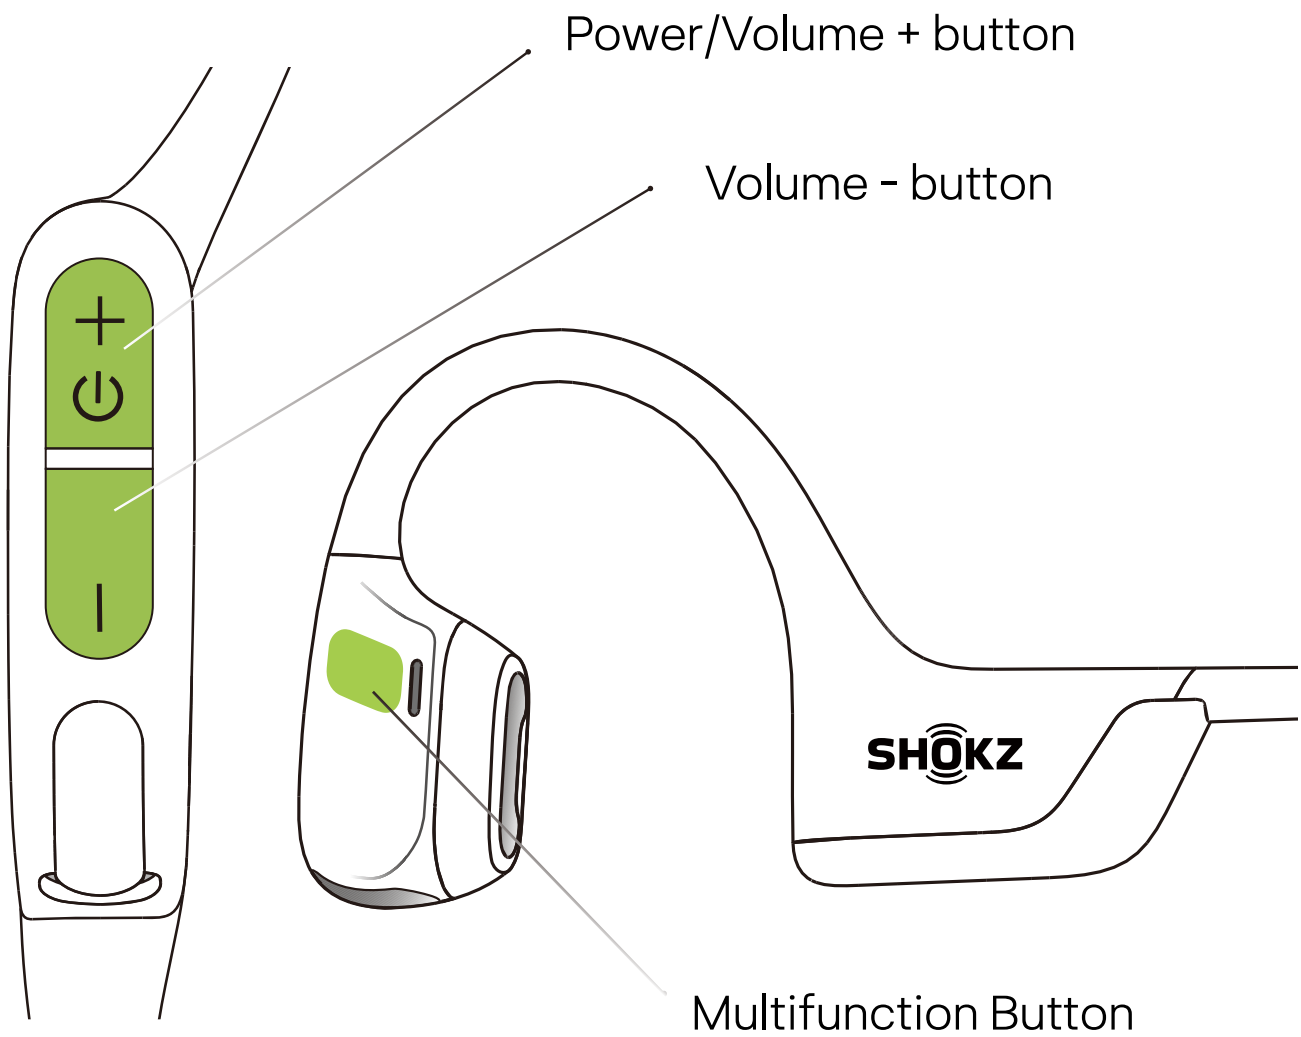


3. Press and hold the Multifunction Button, the Power/Volume + Button, and the Volume - Button simultaneously until a prompt is heard.

Changing Languages


Your headphones have four built-in languages:
Chinese, English, Japanese and Korean.

OFF Operate controls with
headphones powered off.

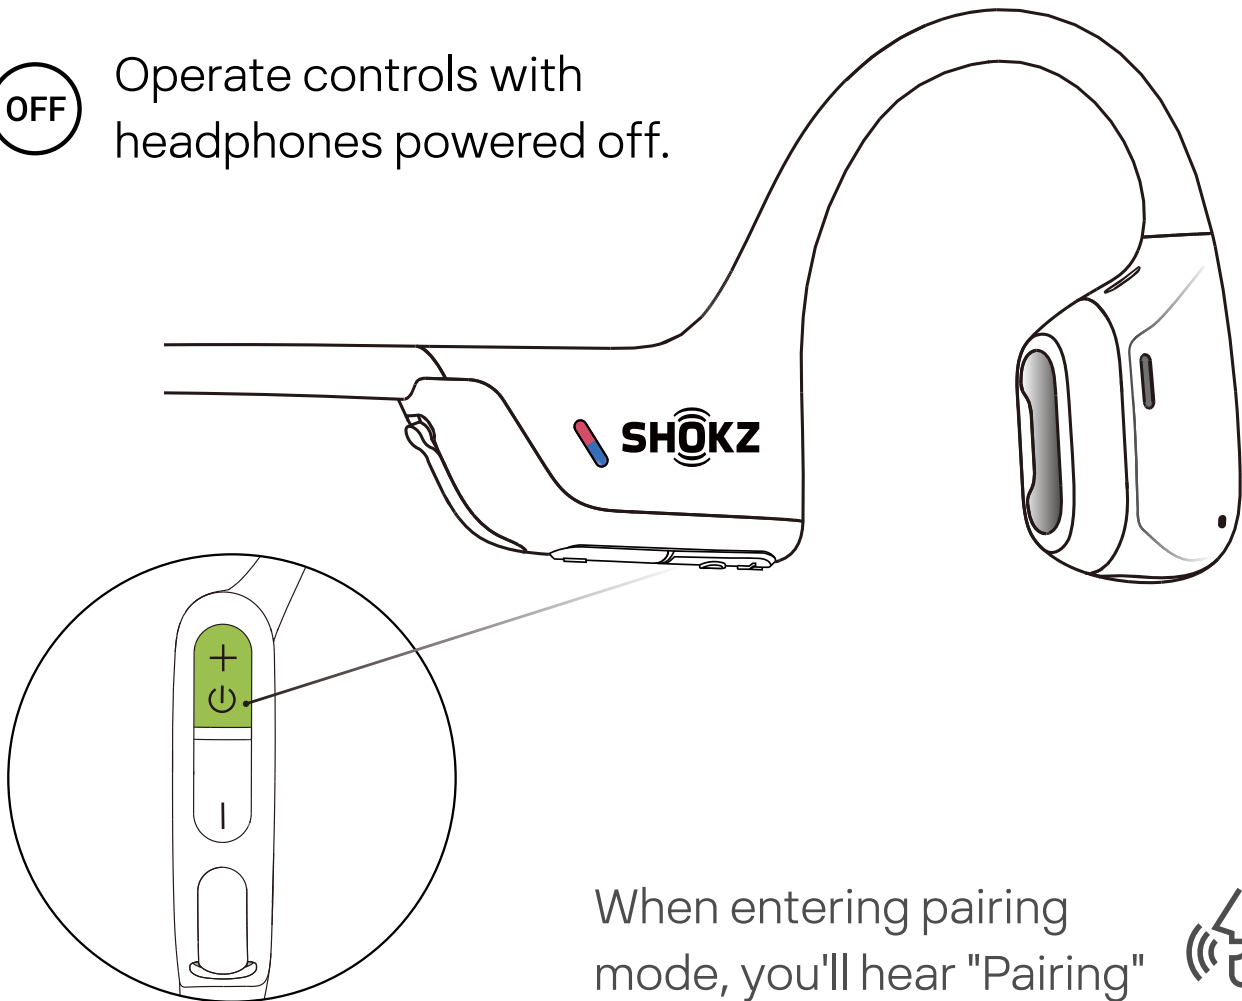

1. Start with your headphones powered off.
2. Press and hold Volume + until you hear "Pairing" and the LED indicator flashes red and blue alternately.

*You can also use the Shokz App to
conveniently switch the voice prompt language.

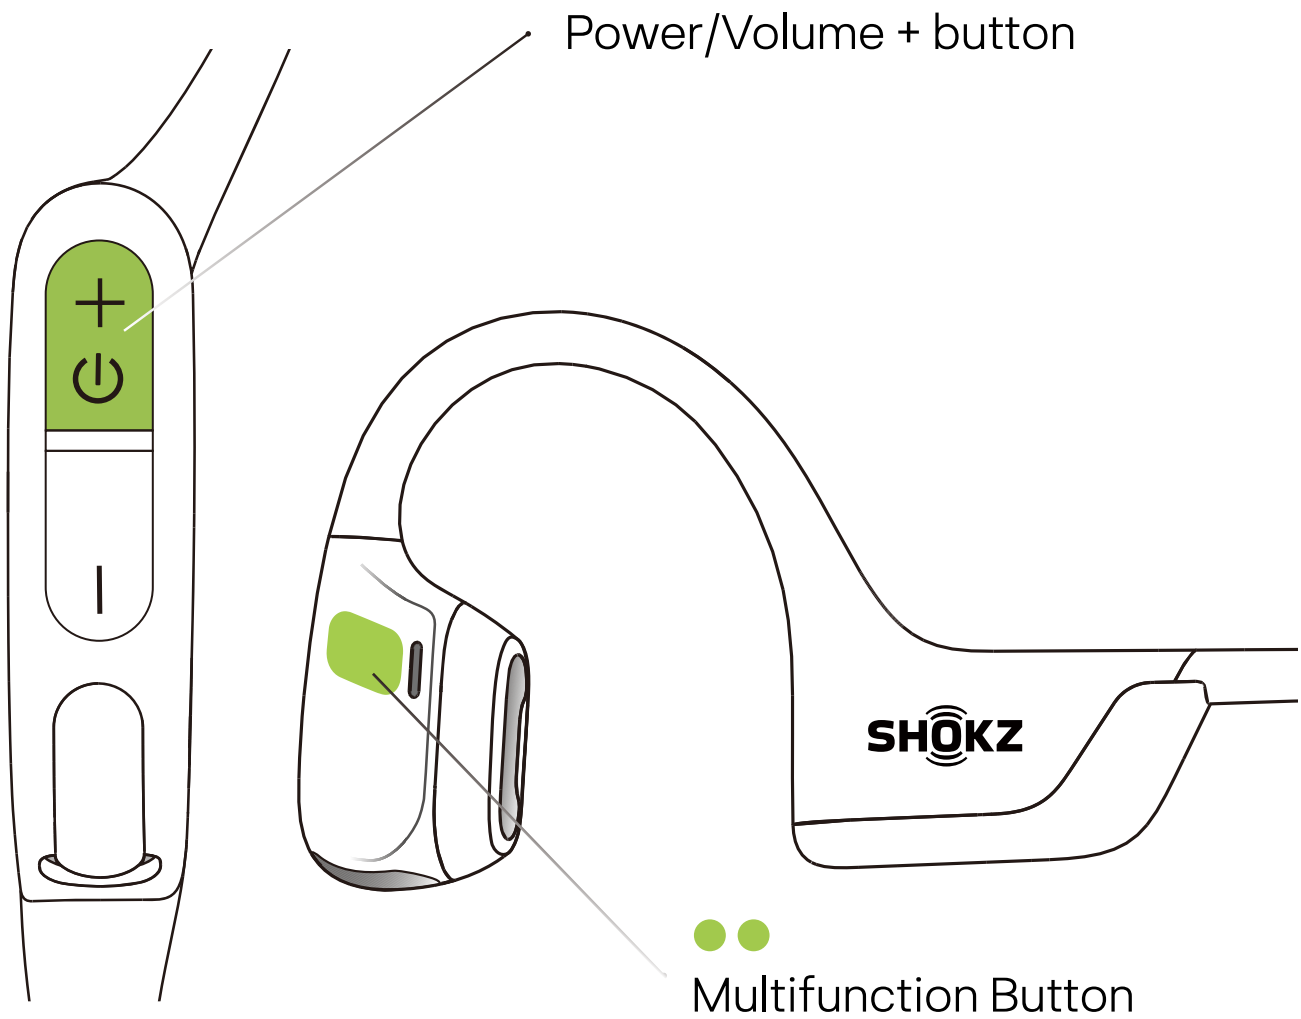


3. Click the Multifunction Button x2, then click the Volume + button x1. Languages have been switched when you hear the corresponding language.

CARE AND MAINTENANCE

Charging Notice



The headphones will automatically power off during charging.

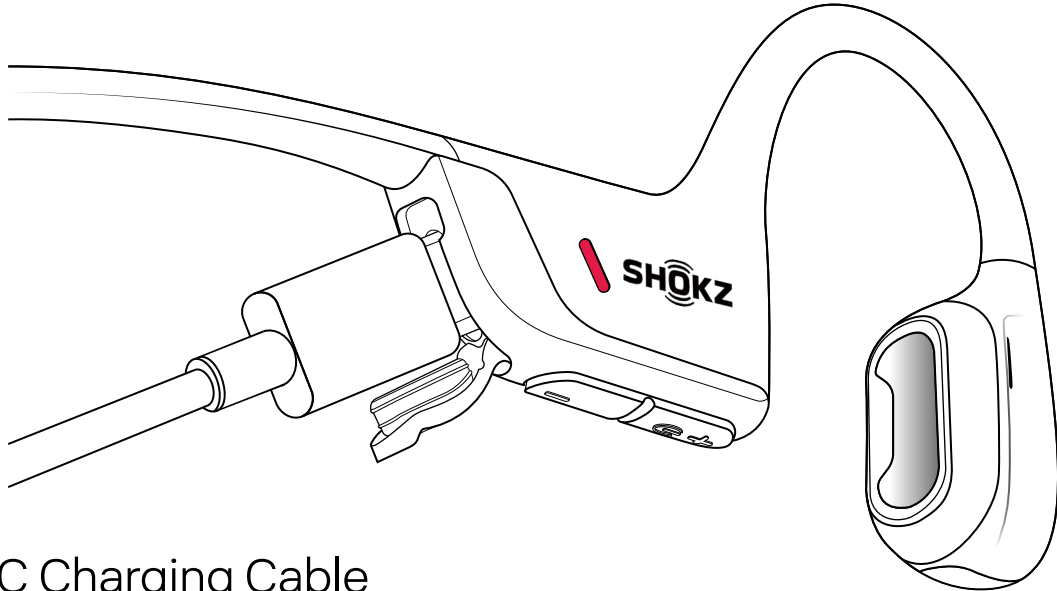

USB-C Charging Cable



Charging



Charging completed

When the battery is low, the headphones will emit a low-battery alert tone, and the red indicator light will flash intermittently. Please connect the charging cable to charge the device.

During charging, the LED indicator will turn red and the headphones will automatically power off. When the indicator turns blue, charging is complete.


Storage and Maintenance

- Store the headphones in a cool, dry place. The working temperature should be 0~40°C (32 ~ 104°F).
- Keep the headphones away from heat sources, combustible gas or other clean/corrosive liquids, keep the headphones away from a long time of direct sunlight, using or placing in hot places.
- Stop using the headphones immediately if any parts are damaged, smoking, hot, or have a burning smell.
- The dust and water resistance level of the product is IP57. It can be used in non-water sports and exercises and is not fully waterproof. Do not place the headphones in water. IP57 is not a permanent protection rating and may be reduced by normal wear and tear rating and may be degraded through normal wear and tear.
- Clean the headphones with a soft dry cloth.
- After storage for a long period, please charge the headphones before using again.


WARRANTY

Your headphones are covered by a warranty. Visit our website at <https://shokz.com/pages/warranty-return> for details of the limited warranty.

WHAT'S IN THE BOX

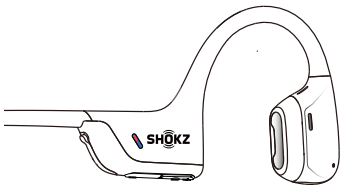


OpenRun Pro 2s
Headphones ×1

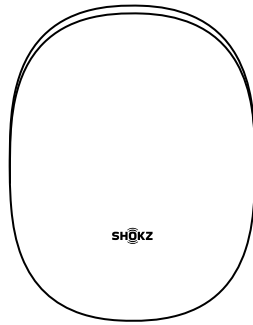


OpenRun Pro 2s
Carrying Case ×1




USB-C
Charging Cable ×1

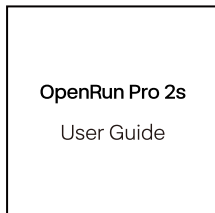

User Guide ×1

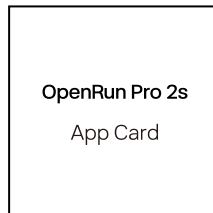

App Card ×1

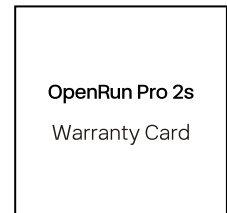

Warranty Card ×1

If any of the above items are missing or the product is damaged, please do not use it.

Please contact the retailer where the product was purchased or reach out to us for assistance.

SHÖKZ